

## Safety Light Curtain with infrared beams SC4 Instruction manual

**Sense**



**ORIGINAL INSTRUCTIONS (ref. 2006/42/EC)**

CARLO GAVAZZI LOGISTICS S.p.A.  
Headquarter: Via Milano 13, I-20020 Lainate (MI)  
Tel.: +39 02 93176.1, Fax +39 02 9176.403  
Internet: <http://www.gavazziautomation.com>

**SC4 Instruction Manual**  
**Ed. 03/2013**

All brand and product names mentioned herein are for identification purposes only and may be trademarks or registered trademarks of their respective owners.

Carlo Gavazzi shall not be liable for technical or editorial errors or omissions contained herein, not for incidental or consequential damages resulting from the use of this material.



**CARLO GAVAZZI**  
Automation Components

CARLO GAVAZZI LOGISTICS S.p.A.  
Headquarter: Via Milano 13, I-20020 Lainate (MI)  
Tel.: +39 02 93176.1, Fax +39 02 9176.403  
Internet: http://www.gavazziautomation.com

**DECLARATION OF CONFORMITY**

declars that the

**SC4**

**SAFETY LIGHT CURTAINS - ELECTRO-SENSITIVE PROTECTIVE EQUIPMENT**

**(Type 4 ESPE)**

and all its models are in conformity with the requirements of the European Council Directives listed below:

**2006 / 42 / EC Machinery Directive**

**2004 / 108 / EC EMC Directive**

**2006 / 95 / EC Low Voltage Directive**

This Declaration is based upon compliance of the products to the following standards:

<b>EN 61496-1: 2004</b>	Safety of machinery - Electro-Sensitive protective equipment. Part 1: General requirements and tests.
<b>IEC 61496-2: 2006</b>	Safety of machinery - Electro-Sensitive protective equipment. Part 2: Particular requirements for equipment using active opto-electronic protective devices (AOPDs).
<b>IEC 61508-1/3/4: 1998</b>	Functional safety of electrical/electronic/programmable electronic. Safety-related systems.
<b>IEC 61508-2: 2000</b>	Safety of machinery - Safety related parts of control system.
<b>EN 954-1: 1996</b>	Safety of machinery - Safety related parts of control system.
<b>EN ISO 13849-1: 2008</b>	Part 1: General principles for design.
<b>EN 62061: 2005</b>	Safety of machinery - Functional safety of safety-related electrical, electronic and programmable electronic control system.
<b>EN 50178: 1997</b>	Electronic equipment for use in power installations.
<b>EN 61000-6-2: 2005</b>	Electromagnetic standards - Immunity for industrial environments.
<b>EN 55022 (Class A ITE): 2010</b>	Limits and methods of measurements of radio disturbance of information technology equipment.

Conformity as been certified by the following Notified/Competent body (identification N° 0123): TÜV SÜD Rail GmbH, Ridlerstrasse, 57 - D80339 München.

Carlo Gavazzi Logistics have a quality system certified by the EQA, Nr. QA130463, as per ISO 9001 and have therefore observed the regulations foreseen during development and manufacturing.

Lainate / September 30<sup>th</sup> 2013

**Vittorio Rossi**  
Carlo Gavazzi Logistics S.p.A.  
Managing director



# Index

<b>1. GENERAL INFORMATION</b>	<b>1</b>
1.1. General description of the safety light curtains	4
1.1.1. Package contents	5
1.2. New features compared to SB4 series (with EDM function)	5
1.3. How to choose the device	6
1.3.1. Resolution	6
1.3.2. Controlled height	7
1.3.3. Minimum installation distance	8
1.4. Typical applications	11
1.5. Safety information	13
<b>2. INSTALLATION MODE</b>	<b>14</b>
2.1. Precautions to be observed for the choice and installation	14
2.2. General information on device positioning	15
2.2.1. Minimum installation distance	16
2.2.2. Minimum distance from reflecting surfaces	17
2.2.3. Distance between homologous devices	19
2.2.4. Emitter and receiver orientation	21
2.2.5. Use of deviating mirrors	21
2.2.6. Controls after first installation	23
<b>3. MECHANICAL MOUNTING</b>	<b>24</b>
<b>4. ELECTRICAL CONNECTIONS</b>	<b>27</b>
4.1. Notes on connections	28
4.2. Ground connection	31
<b>5. ALIGNMENT PROCEDURE</b>	<b>32</b>
5.1. Correct alignment procedure	33
<b>6. FUNCTIONING MODE</b>	<b>35</b>
6.1. Reset mode	35
6.2. Test function	36
6.3. Reset function	36
6.4. EDM function	37
6.5. Alignment aid function	38
<b>7. DIAGNOSTIC FUNCTIONS</b>	<b>39</b>
7.1. User interface	39
7.2. Diagnostic messages	39
<b>8. PERIODICAL CHECKS</b>	<b>42</b>
8.1. General information and useful data	43
8.2. Warranty	43
<b>9. DEVICE MAINTENANCE</b>	<b>44</b>
9.1. Product disposal	44



<b>10. TECHNICAL DATA</b>	<b>45</b>
<b>11. LIST OF AVAILABLE MODELS</b>	<b>46</b>
<b>12. OVERALL DIMENSIONS</b>	<b>48</b>
<b>13. ACCESSORIES</b>	<b>49</b>
13.1. Angled fixing bracket	49
13.2. Test piece	51
13.3. Connection cables	51
<b>14. GLOSSARY</b>	<b>52</b>



# 1. General Information

## 1.1. General Description of the Safety Light Curtains

---

The safety light curtains of the SC4 series are optoelectronic multibeam devices that are used to protect working areas that, in presence of machines, robots, and automatic systems in general, can become dangerous for operators that can get in touch, even accidentally, with moving parts. The light curtains of the SC4 series are Type 2 intrinsic safety systems used as accident-prevention protection devices and are manufactured in accordance with the international Standards in force for safety, in particular:

- |                              |   |
|------------------------------|---|
| <b>CEI IEC 61496-1:</b> 2004 | Safety of machinery: electro-sensitive protective equipment. Part 1: General prescriptions and tests.   |
| <b>CEI IEC 61496-2:</b> 2006 | Safety of machinery: electro-sensitive protective equipment Particular requirements for equipment using active optoelectronic protective devices. |

The device, consisting of one emitter and one receiver housed inside strong aluminium profiles, generates infrared beams that detect any opaque object positioned within the light curtain detection field. The emitter and the receiver are equipped with the command and control functions. The connections are made through a M12 connector located in the lower side of the profile. The synchronisation between the emitter and the receiver takes place optically, i.e. no electrical connection between the two units is required. The microprocessor guarantees the check and the management of the beams that are sent and received through the units. The microprocessor – through some LEDs – informs the operator about the general conditions of the safety light curtain (see section 7 “Diagnostic functions”). The device consists in 2 units that, according to the model, are composed by one or several emitting and receiving modules. The receiver checks the control operations and safety actions.

During installation, two yellow LEDs facilitate the alignment of both units (see section 5 “Alignment procedure”). As soon as an object, a limb or the operator’s body accidentally interrupts one or some of the infrared beams sent by the emitter, the receiver immediately opens the OSSD outputs and blocks the MPCE machine (if correctly connected to the OSSD).

Some parts or sections of this manual containing important information for the operator are preceded by a note:

**Notes and detailed descriptions about particular characteristics of the safety devices in order to better explain their functioning. Special instructions regarding the installation process.**

**⚠ The information provided in the paragraphs following this symbol is very important for safety and may prevent accidents. Always read this information accurately and carefully follow the advice to the letter.**

This manual contains all the information necessary for the selection and operation of the safety devices. However, specialised knowledge not included in this technical description is required for the planning and implementation of a safety light curtain on a power-driven machine. As the required knowledge may not be completely included in this manual, we suggest the customer to contact Carlo Gavazzi Technical Service for any necessary information relative to the functioning of the SC4 light curtains and the safety rules that regulate the correct installation (see section 8 “Periodical checks”).



### **1.1.1. Package Contents**

---

Package contains the following objects:

- Receiver (RX)
- Emitter (TX)
- Installation Quick Guide of SC4 curtain
- Biannual checklist and periodical maintenance schedule
- CD with instruction manual and other documents
- 4 angled fixing brackets and specific fasteners
- 2 angled fixing brackets for models with heights included between 1200 and 1800 mm

### **1.2. New Features Compared to SB4 Series (with EDM function)**

---

With respect to SB4 (EDM) series, the SC4 safety light curtain series presents new important features:

- Higher operating distance
- Shorter response time (see sect.10 “Technical Data”)
- Range enlargement with 150 to 1650 mm controlled heights
- New profile compatible with SB accessories
- New fastening system with rotating brackets
- TEST line with reversed activation logics (active high)
- Advanced alignment for receiver and transmitter units

Furthermore, SC4 has 2 selectable functions, i.e.:


 
- EDM function
- Manual/automatic Restart

### 1.3. How to Choose the Device

There are at least three different main characteristics that should be considered when choosing a safety light curtain, after having evaluated the risk assessment:

#### 1.3.1. Resolution

The resolution of the device is the minimum dimension that an opaque object must have in order to obscure at least one of the beams that constitute the sensitive area. The resolution strictly depends on the part of the body to be protected

R = 14 mm	Finger protection	
R = 30 mm	Hand control	

As shown in Fig.1, the resolution only depends on the geometrical characteristics of the lenses, diameter and distance between centres, and is independent of any environmental and operating conditions of the safety light curtain.

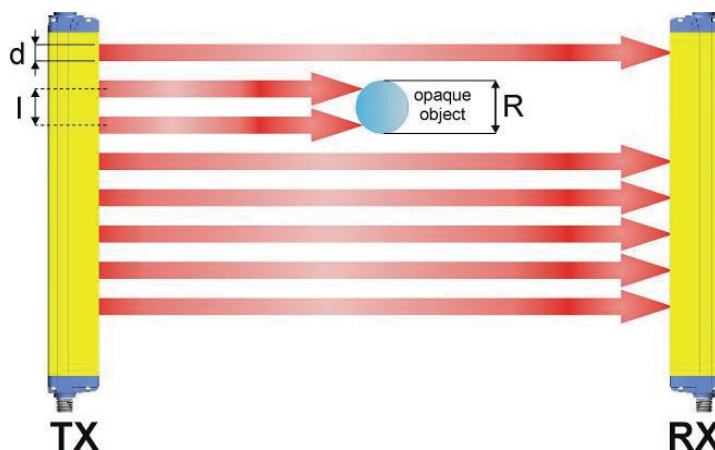


Fig. 1

The resolution value is obtained applying the following formula:

$$R = l + d$$

where:

- l = Distance between two adjacent optics
- d = Lens diameter



### 1.3.2. Controlled Height

The controlled height is the height protected by the safety light curtain ( Hp )

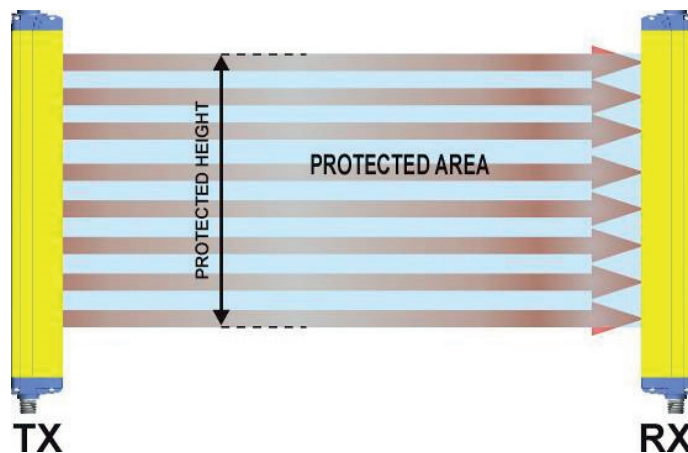
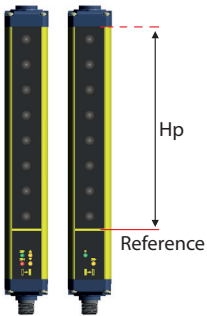
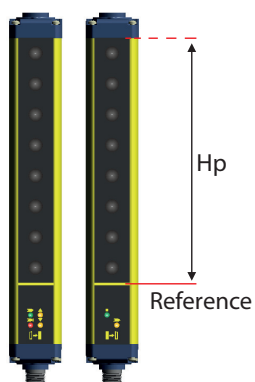


Fig. 2

The SC4 controlled height is delimited by the yellow line pad-printed on the front glass and by the dimensions listed in the table:

	Model	Controlled height Hp (mm)
	SC4-ED-14-150-D6	150
	SC4-ED-14-300-D6	300
	SC4-ED-14-450-D6	450
	SC4-ED-14-600-D6	600
	SC4-ED-14-750-D6	750
	SC4-ED-14-900-D6	900
	SC4-ED-14-1050-D6	1050
SC4-ED-14-1200-D6	1200	

	Model	Controlled height Hp (mm)
	SC4-ED-30-300-D19	300
	SC4-ED-30-450-D19	450
	SC4-ED-30-600-D19	600
	SC4-ED-30-750-D19	750
	SC4-ED-30-900-D19	900
	SC4-ED-30-1050-D19	1050
	SC4-ED-30-1200-D19	1200
	SC4-ED-30-1350-D19	1350
	SC4-ED-30-1500-D19	1500
	SC4-ED-30-1650-D19	1650

### 1.3.3. Minimum Installation Distance

The safety device must be positioned at a specific safety distance (Fig. 3). This distance must ensure that the dangerous area cannot be reached before the dangerous motion of the machine has been stopped by the ESPE.

The safety distance depends on 4 factors, according to the EN-999 Standard:

- Response time of the ESPE (the time between the effective beam interruption and the opening of the OSSD contacts).
- Machine stopping time (the time between the effective opening of the contacts of the ESPE and the real stop of the dangerous motion of the machine).
- ESPE resolution.
- Approaching speed of the object to be detected.

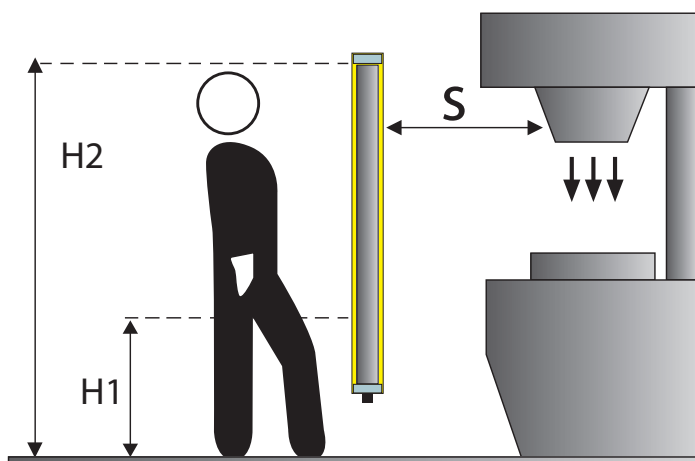


Fig. 3

The following formula is used for the calculation of the safety distance:

$$S = K (t_1 + t_2) + C$$

where:

S = Minimum safety distance in mm.

K = Speed of the object, limb or body approaching the dangerous area in mm/sec.

$t_1$  = Response time of the ESPE in seconds (see section 9 "Technical data")

$t_2$  = Machine stopping time in seconds.

d = Resolution of the system.

C = Additional distance based on the possibility to insert the body or one of body parts inside the dangerous area before the protective device trips.

C = 8 (d - 14) for devices with resolution  $\leq 40$ mm

C = 850 mm for devices with resolution  $\geq 40$ mm.

**NOTE: K value is:**

**2000 mm/s if the calculated value of S is  $\leq 500$  mm**

**1600 mm/s if the calculated value of S is  $> 500$  mm**



When devices with >40 mm resolution are used, the height of the top beam has to be  $\geq 900$  mm (H2) from machine supporting base while the height of the bottom beam has to be  $\leq 300$  mm (H1). If the safety light curtain must be mounted in a horizontal position (Fig.4), the distance between the dangerous area and the most distant optical beam must be equal to the value calculated using the following formula:

$$S = 1600 \text{ mm/s } (t_1 + t_2) + 1200 - 0.4 H$$


where:

S = Minimum safety distance in mm.

$t_1$  = Response time of the ESPE in seconds (see section 9 “Technical data”)

$t_2$  = Machine stopping time in seconds.

H = Beam height from ground; this height must always be less than 1,000 mm.

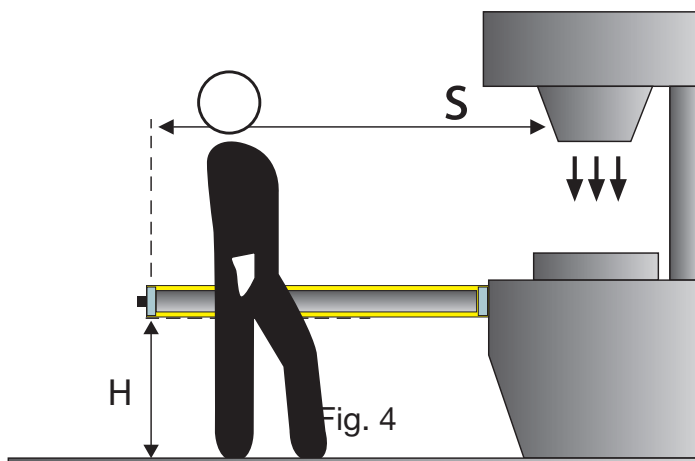



Practical examples:

Let's suppose to have a light curtain with height = 600 mm

1) To calculate the distance of the device from the ESPE, in a vertical position, the following formula is used:

$$S = K * T + C$$

where:

$$T = t_1 + t_2$$

$t_1$  = ESPE response time + SE-SR2 relay release time (max 80 ms)

$t_2$  = Machine total stopping time.

$C = 8 * (d - 14)$  for devices with resolution  $\leq 40$  mm

D = resolution

In all cases, if  $K = 2000\text{mm/sec}$  then  $S > 500$  mm. Distance will have then to be recalculated using  $K = 1600$  mm/sec.

	SC4-ED-14-600-D6	SC4-ED-30-600-D19
<b>T</b>	0.393 sec	0.394 sec
<b>C</b>	0 mm	128 mm
<b>S</b>	641.6 mm	758.4 mm

**WARNING:** The reference standard is EN 999 “Machine safety - the positioning of the protective device based on the approaching speed of the human body”.

The following information is to be considered as indicative and concise. For correct safety distance please refer to complete standard EN-999.

## 1.4. Typical Application

---

The SC4 FINGER safety light curtains provide solutions in all automation fields where the access to dangerous areas has to be controlled.

In particular, the safety curtains can be used in stopping moving parts in:

- Automatic machines;
- Packaging and cutting machines;
- Textile, wood-working and ceramic machines;
- Automatic assembling lines;
- Milling, lathe and shearing machines;
- Bending and metal-working machines.

### Example 1: Operating point protection on drilling machines

The operator positions the part and takes it back after machining.

The operator must be protected against possible abrasions while working.

**Solution:** SC4 14 mm safety light curtain is especially suitable for this kind of application, which requires the installation of the device directly on the machine.

**Benefits:** The extremely reduced profile guarantees installation flexibility adapting itself to the machine dimensions. The rotating fixing brackets, supplied as accessories, speed up and facilitate mounting.




### Example 2: Bending presses

The safety device must protect the operator from being squashed between the top and bottom parts or the machined part during the fast approach phase.

**Solution:** If only one beam of the SC4 14 mm safety light curtain is interrupted while the press is moving down, the mobile tool bar will stop.

**Benefits:** The safety light curtain can be used in most bending operations thanks to its easy installation and compact dimensions. As well as offering excellent reliability, SC4 14 mm ensures increased plant productivity as it reduces the dead times necessary for machine accessing, adjustment and maintenance.

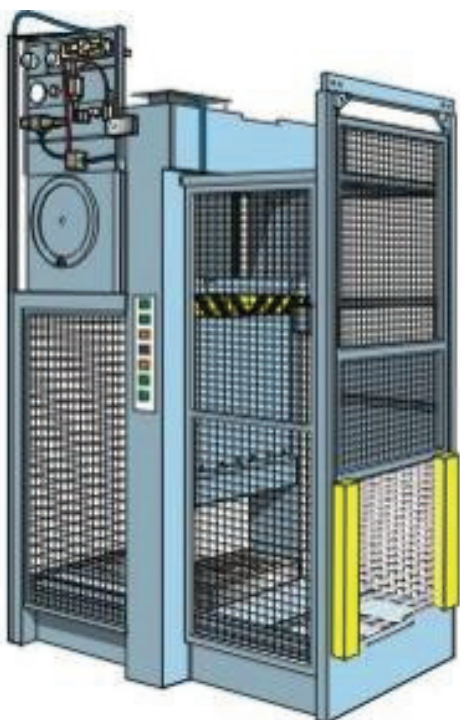




### Example 3: Paper cutting machines

These machines typically cut paper to a specific size for newspapers or special applications. The operator must be protected against abrasion or cuts by cutter blades.

**Solution:** SC4 30 mm safety light curtain is especially suitable for this kind of application, which require the installation of the device directly on the machine.


**Benefits:** Highly reduced profile and the two side slots ensure installation flexibility for machine dimensions.

**Advantages:** The extremely reduced profile guarantees installation flexibility adapting itself to the machine dimensions. The rotating fixing brackets, supplied as accessories, speed up and facilitate mounting

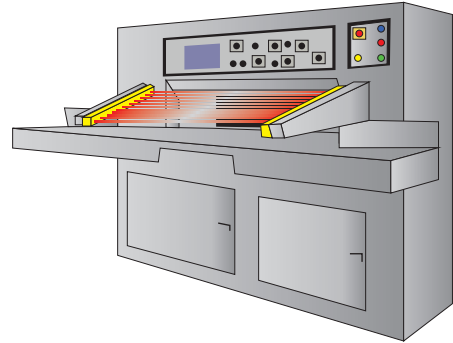

### Example 4: Milling machines

A milling machine is a machine tool used for the shaping of metals and other solid materials. Operator hands and body must be protected from being dragged, entangled or cut by the tool / spindle.

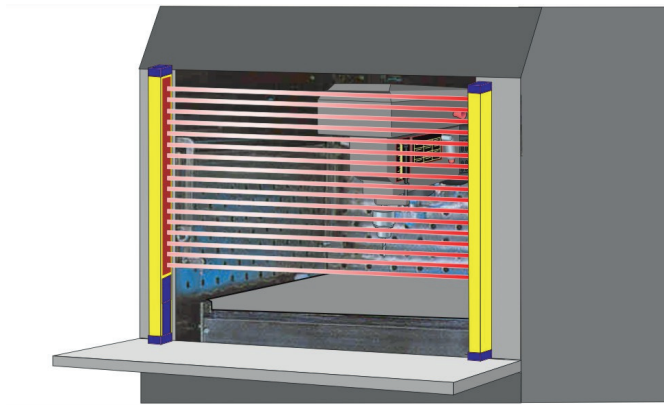

**Solution:** SC4 30 mm series safety light curtain is the best solution considering the required safety levels and application type. When even just one of the light curtain beams is interrupted, the machine is immediately stopped.

**Benefits:** The extremely reduced profile guarantees installation flexibility adapting itself to the machine dimensions.



## 1.5. Safety Information

---

**For a correct and safe use of the safety light curtains of the SC4 series, the following points must be observed:**

- The stopping system of the machine must be electrically controlled.
- This control system must be able to stop the dangerous movement of the machine within the total machine stopping time T as per section 1.3.3, and during all working cycle phases.
- Mounting and connection of the safety light curtain must be carried out by qualified personnel only, according to the indications included in the special sections (refer to sections 2; 3; 4; 5) and in the applicable standards.
- The personnel operating in the dangerous area must be well trained and must have adequate knowledge of all the operating procedures of the safety light curtain
- The TEST button must be located outside the protected area because the operator must check the protected area during all Test operation.
- The RESET/RESTART button must be located outside the protected area because the operator must check the protected area during all Reset/Restart operations.

Please carefully read the instructions for the correct functioning before powering the light curtain.



## 2. Installation Mode

### 2.1. Precautions to be Observed for the Choice and Installation

---

**⚠ Make sure that the protection level assured by the SC4 device (Type 4) is compatible with the real danger level of the machine to be controlled, according to EN 954-1 and EN ISO 13849-1:2008.**

- The outputs (OSSD) of the ESPE must be used as machine stopping devices and not as command devices. The machine must have its own START command.
- The dimension of the smallest object to be detected must be larger than the resolution level of the device.
- The ESPE must be installed in a room complying with the technical characteristics indicated in section 10 “Technical Data”.
- Do not install device near strong and/or flashing light sources or close to similar devices.
- The presence of intense electromagnetic disturbances could jeopardise device functioning. This condition shall be carefully assessed by seeking the advice of Carlo Gavazzi Technical service.
- The operating distance of the device can be reduced in presence of smog, fog or airborne dust.
- A sudden change in environment temperature, with very low minimum peaks, can generate a small condensation layer on the lenses and so jeopardise functioning.



## 2.2. General Information on Device Positioning

The safety light curtain should be carefully positioned, in order to reach a very high protection standard. Access to the dangerous area must only be possible by passing through the protecting safety light beams.

**⚠ Fig. 5a shows some examples of possible access to the machine from the top and the bottom sides. These situations may be very dangerous and so the installation of the safety light curtain at sufficient height in order to completely cover the access to the dangerous area (Fig.5b) becomes necessary.**

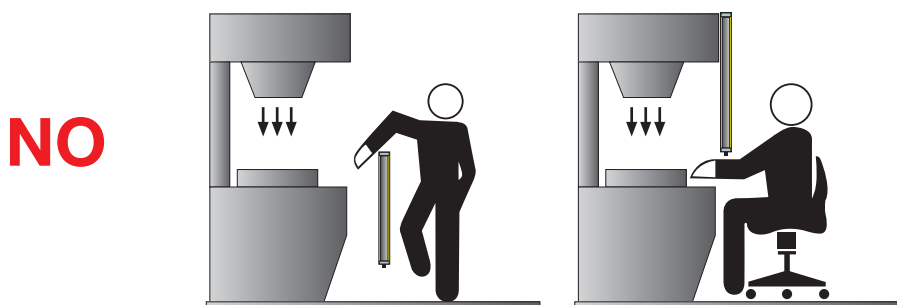


Fig. 5a

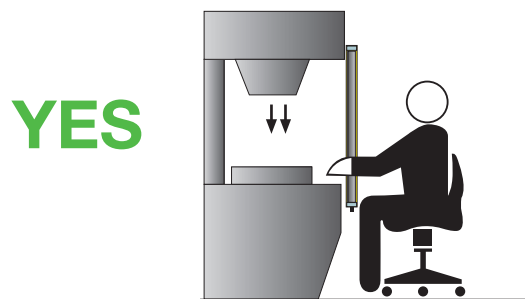


Fig. 5b

Under standard operating conditions, machine starting must not be possible while operators are inside the dangerous area.



When the installation of the safety light curtain near to the dangerous area is not possible, a second light curtain must be mounted in a horizontal position in order to prevent any lateral access, as shown in Fig.6b.

**⚠ If the operator is able to enter the dangerous area, an additional mechanical protection must be mounted to prevent the access.**

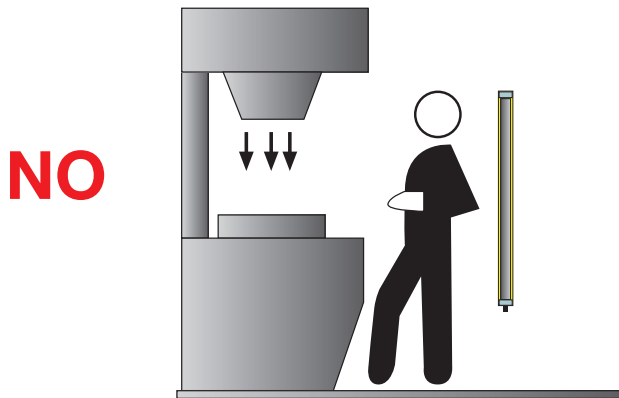


Fig. 6a

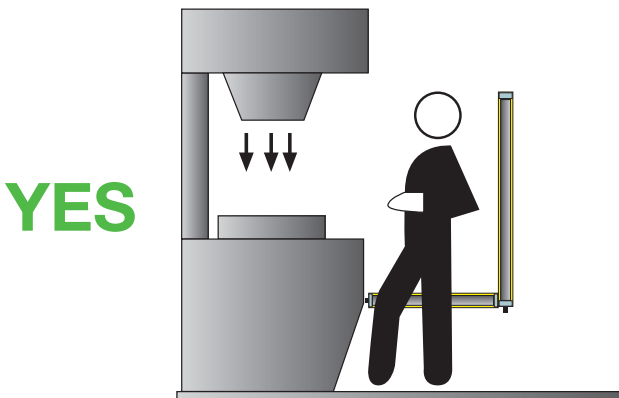


Fig. 6b

### 2.2.1. Minimum Installation Distance

---

Refer to section.1.3.3. "Minimum installation distance"

### 2.2.2. Minimum Distance from Reflecting Surface

Reflecting surfaces placed near the light beams of the safety device (over, under or laterally) can cause passive reflections. These reflections can affect the recognition of an object inside the controlled area.

However, if the RX receiver detects a secondary beam (reflected by the side-reflecting surface) the object might not be detected, even if the object interrupts the main beam.

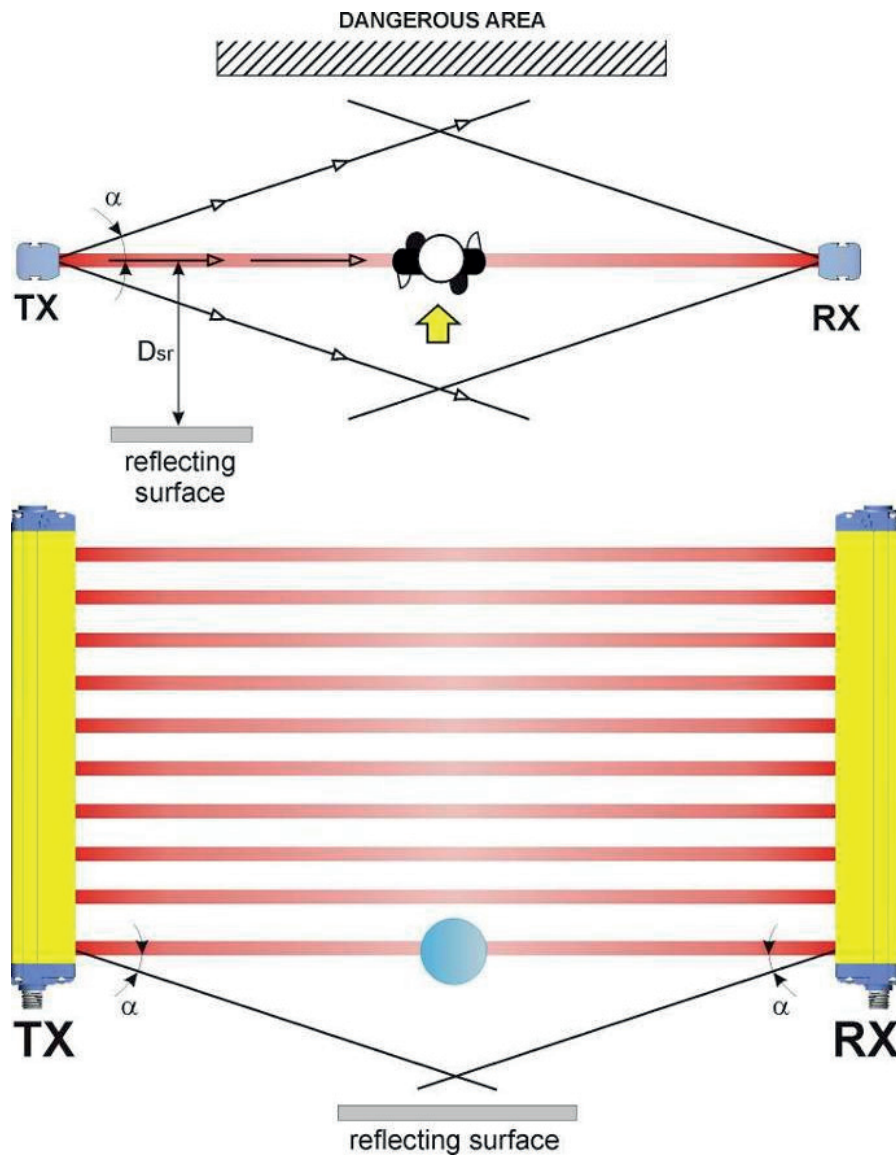


Fig. 7



It is thus important to position the safety light curtain according to the minimum distance from reflecting surfaces.

The minimum distance depends on:

- operating distance between emitter (TX) and receiver (RX);
- real aperture angle of ESPE (EAA); especially:

**for ESPE type 4 EAA = 50° ( $\alpha = \pm 2.5^\circ$ )**

Diagram of Fig. 8 shows the minimum distance from the reflecting surface ( $D_{sr}$ ), based on the operating distance:

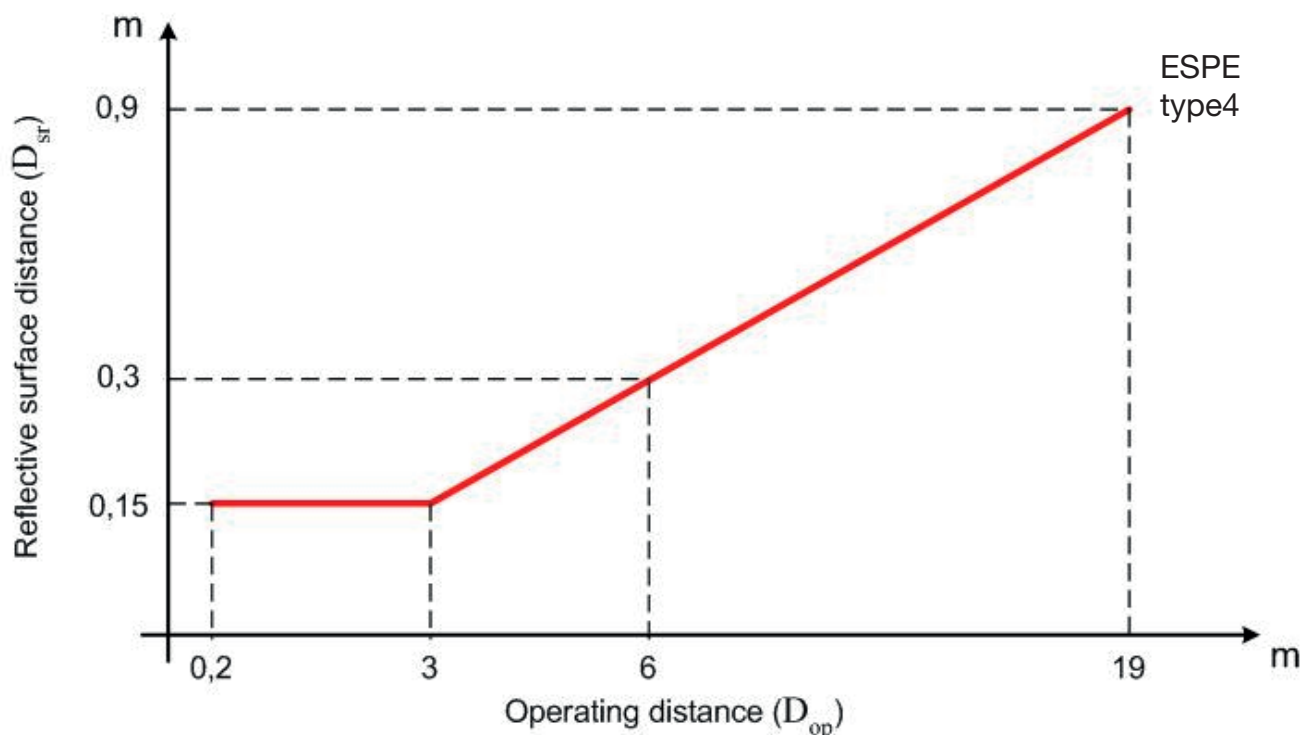


Fig. 8

The formula to get  $D_{sr}$  is the following:


$$D_{sr} (m) = 0.15 \quad \text{for oper. distances } < 3 \text{ m}$$

$$D_{sr} (m) = 0.5 \text{ operating distance (m)} \times \text{tg } 2\alpha \quad \text{for oper. distances } \geq 3 \text{ m}$$

### 2.2.3. Distance Between Homologous Devices

If different safety devices have to be installed in adjacent areas, the emitter of one device must not interfere dangerously with the receiver of the other device.


The TX<sub>B</sub> interfering device must be positioned outside a minimum D<sub>do</sub> distance from the TX<sub>A</sub> – RX<sub>A</sub> emitter-receiver couple axis.

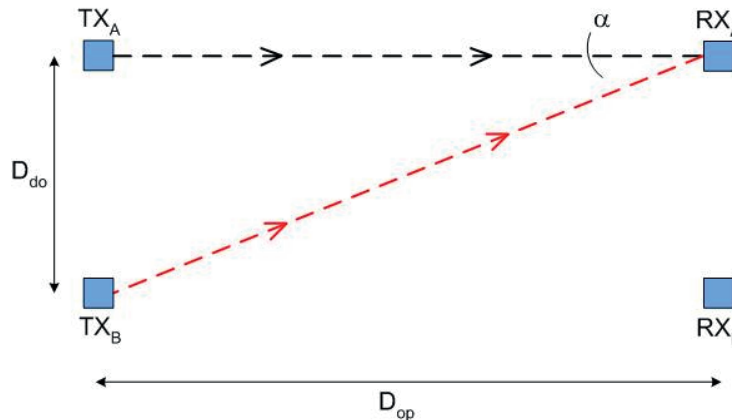

This minimum D<sub>do</sub> distance depends on:

- the operating distance between emitter (TX<sub>A</sub>) and receiver (RX<sub>A</sub>)
- the effective aperture angle of the ESPE (EAA)

The following graphic shows the distance from the interfering devices (D<sub>do</sub>) according to the operating distance (D<sub>op</sub>) of the couple (TX<sub>A</sub> – RX<sub>A</sub>).

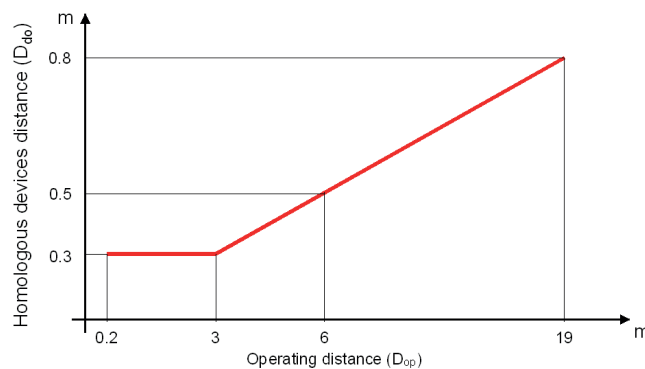

The following table shows, for convenience, the values of the minimum installation distances relative to some operating distances:

Operating distance (m)	Minimum installation distance (m)
3	0,3
6	0,4
10	0,5
19	0,6

**WARNING:** the interfering device (TX<sub>B</sub>) must be positioned at the same D<sub>do</sub> distance, calculated as shown above, even if closer to TX<sub>A</sub> respect to RX<sub>A</sub>.



Installation precautions have to be taken to avoid interference between homologous devices. A typical situation is represented by the installation areas of several adjacent safety devices aligned one next to the other, for example in plants with different machines.

Fig.9 provides two examples:

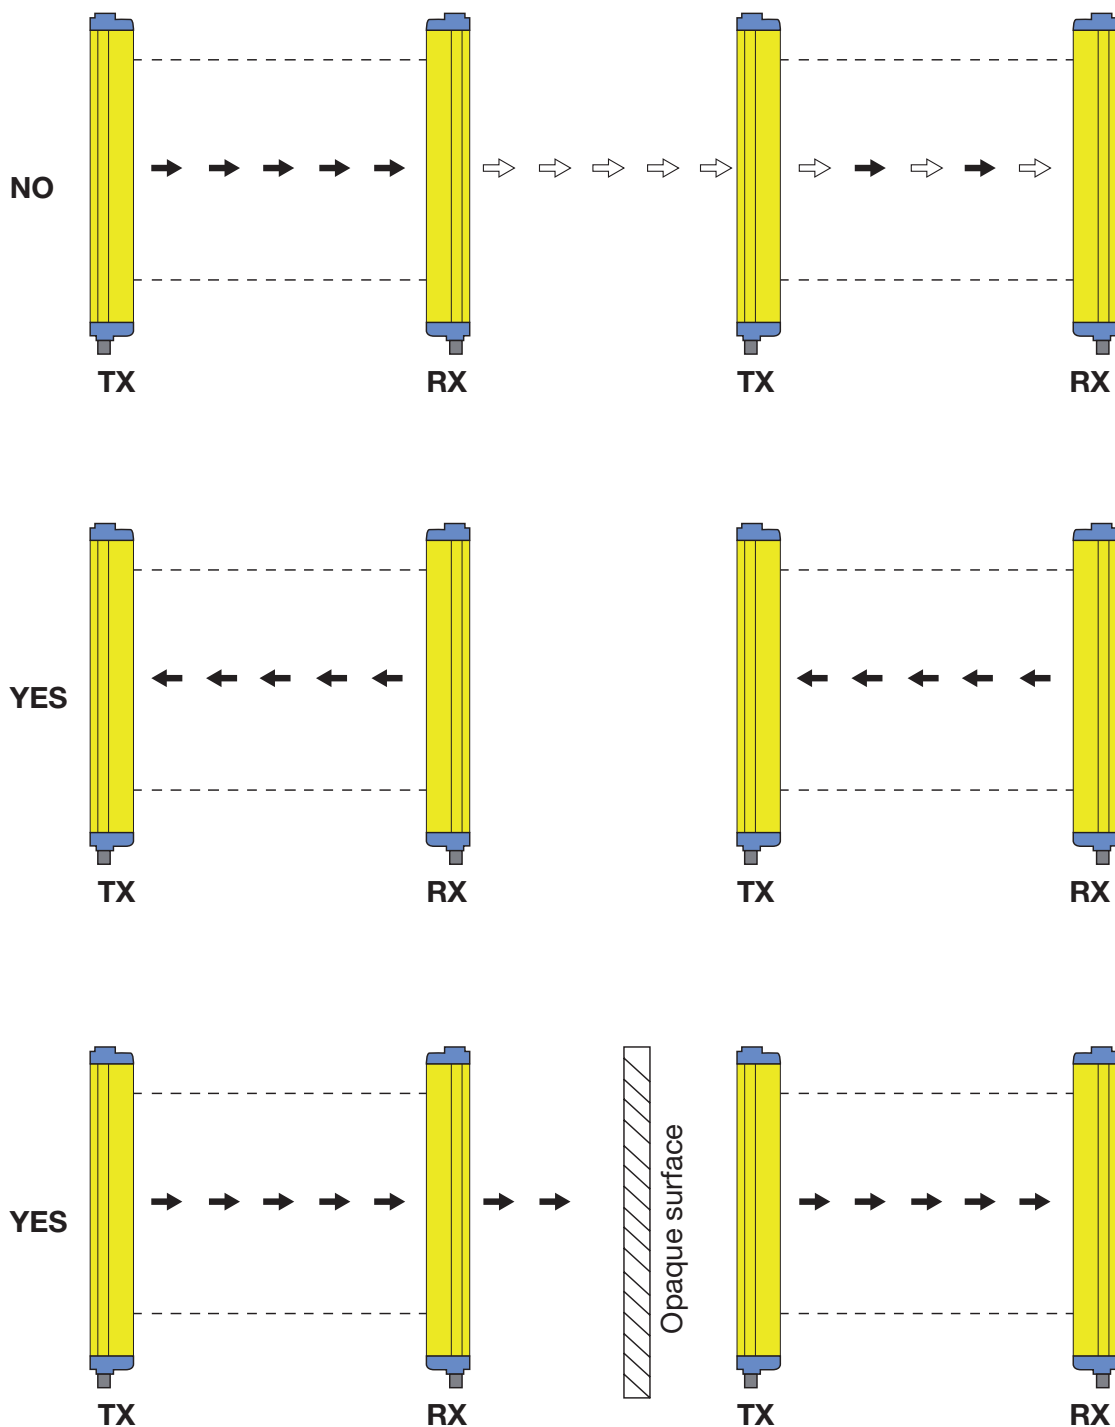


Fig. 9

### 2.2.4. Emitter and Receiver Orientation

The two units shall be assembled parallel each other, with the beams arranged at right angles with the emission and receiving surface, and with the connectors orientated towards the same direction.

The configurations shown in Fig.10 must be avoided:

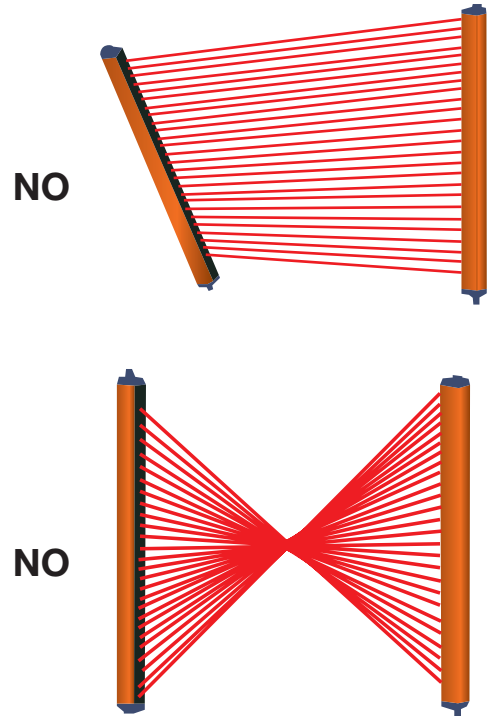


Fig. 10

### 2.2.5. Use of Deviating Mirrors

The control of any dangerous area, with several but adjacent access sides, is possible using only one safety device and well-positioned deviating mirrors.

Fig.11 shows a possible solution to control three different access sides, using two mirrors placed at 45° respect to the beams.

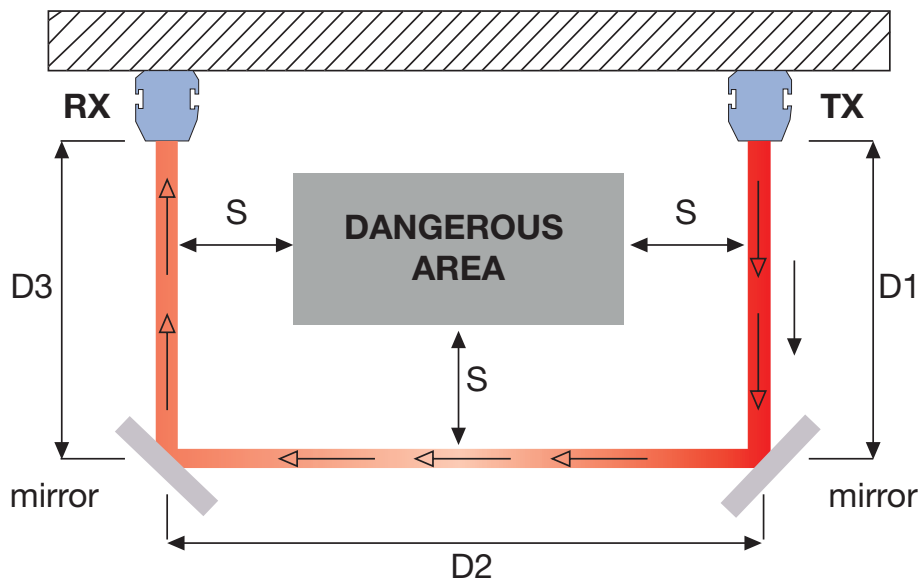


Fig. 11



The operator must respect the following precautions when using the deviating mirrors:

- The alignment of the emitter and the receiver can be a very critical operation when deviating mirrors are used. Even very small displacements of the mirror is enough to lose alignment. The use of Carlo Gavazzi laser pointer accessory is recommended under these conditions.
- The minimum safety distance (S) must be respected for each single section of the beams.
- The effective operating range decreases by about 15% by using only one deviating mirror, the percentage further decreases by using 2 or more mirrors (for more details refer to the technical specifications of the mirrors used).

The following table shows the operating distances relating to the number of mirrors used.

Number of mirrors	Operating distance (14mm)	Operating distance (30mm)
1	5.1 m	16.5 m
2	4.3 m	13.7 m
3	3.7 m	11.6 m


- Do not use more than three mirrors for each device.
- The presence of dust or dirt on the reflecting surface of the mirror causes a drastic reduction in the range.



## 2.2.6. Controls After First Installation

- The control operations to carry-out after the first installation and before machine start-up are listed hereinafter. The controls must be carried-out by qualified personnel, either directly or under the strict supervision of the person in charge of machinery Safety.

Verify that:

- ESPE remains blocked (  ) intercepting the beams along the protected area using the specific test piece, following the Fig.12 scheme.

**TP14 for light curtains with 14 mm resolution:**

**SC4-ED-14-150-D60**

**TP30 for light curtains with 30 mm resolution:**

**SC4-ED-30-300-D19**

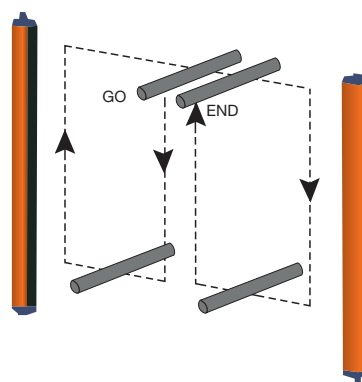




Fig. 12

- ESPE has to be correctly aligned, press slightly on the product side in both directions the red LED must not turn on  .
- The activation of the TEST function causes the opening of the OSSD outputs (red LED  on and controlled machine stop).
- The response time at machine STOP, including the ESPE and machine response times, must be included in the limits defined in the calculation of the safety distance (refer to section 2 “Installation modes”).
- The safety distance between the dangerous parts and ESPE must comply with the requirements indicated in section 2 “Installation modes”.
- A person must not access or remain between ESPE and the dangerous parts of the machine.
- Access to the dangerous areas of the machine must not be possible from any unprotected area.
- ESPE must not be disturbed by external light sources, ensuring that it remains in Normal operating function for at least 10-15 minutes and placing the specific test piece in the protected area in the SAFE condition for the same period.
- Verify the correspondence of all the accessory functions, activating them in the different operating conditions.



### 3. Mechanical Mounting

The emitting (TX) and receiving (RX) units must be installed with the relevant sensitive surfaces facing each other. The connectors must be positioned on the same side and the distance must be included within the operating range of the model used (see section 10 “Technical data”).

The two units must be positioned the most aligned and parallel possible. The next step is the fine alignment, as shown in section 5 “Alignment Procedure”.

Two types of brackets can be used to fix the two units:

#### Angled fixing brackets

Angled fixing brackets are supplied with all SC4 models (Fig.13). Adjustable supports for correcting unit inclination on the axes are available on request (see section.14 “Accessories”).

For fixing with angled brackets, refer to Fig.13.

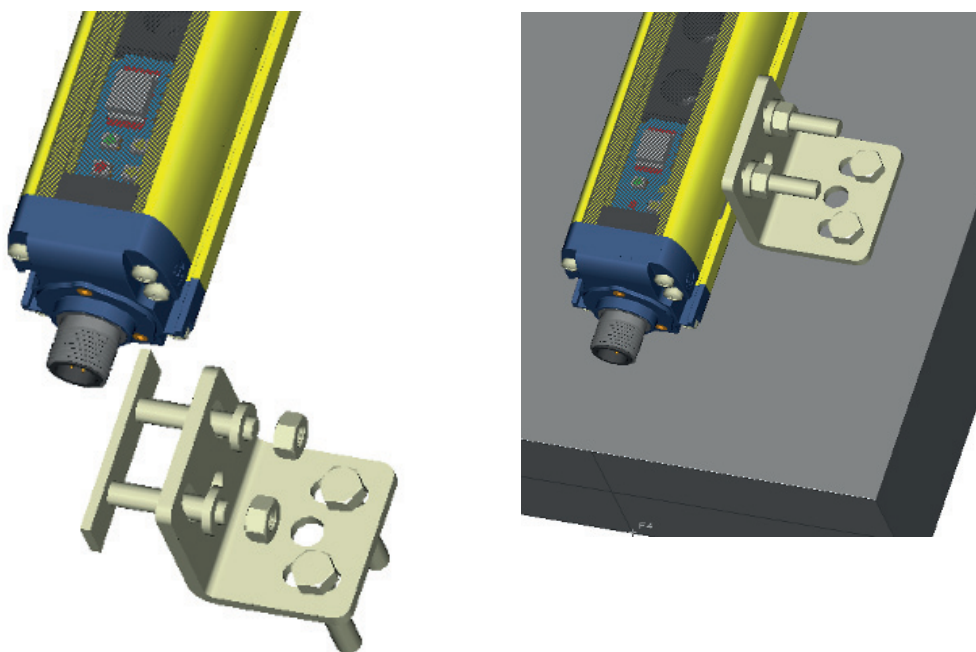


Fig. 13



**Rotating brackets**

Rotating brackets (Fig.14), available upon request, can be used as an alternative or together with angled brackets.

For fixing with rotating bracket, refer to Fig.14.

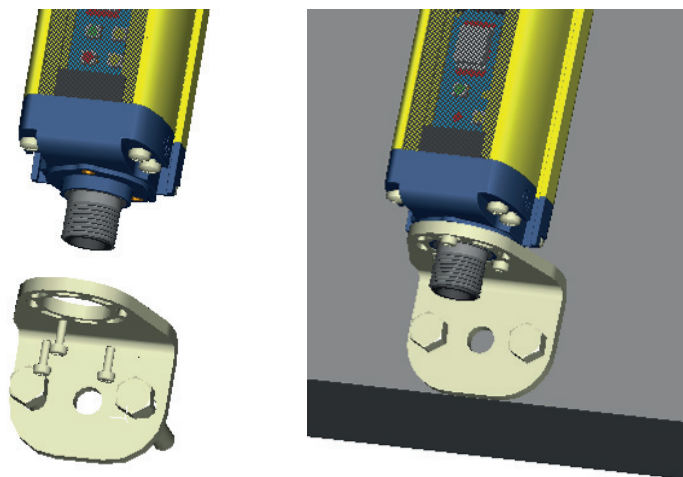


Fig. 14

In case of applications with particularly strong vibrations, vibration dampers, together with mounting brackets, are recommended to reduce the impact of the vibrations.


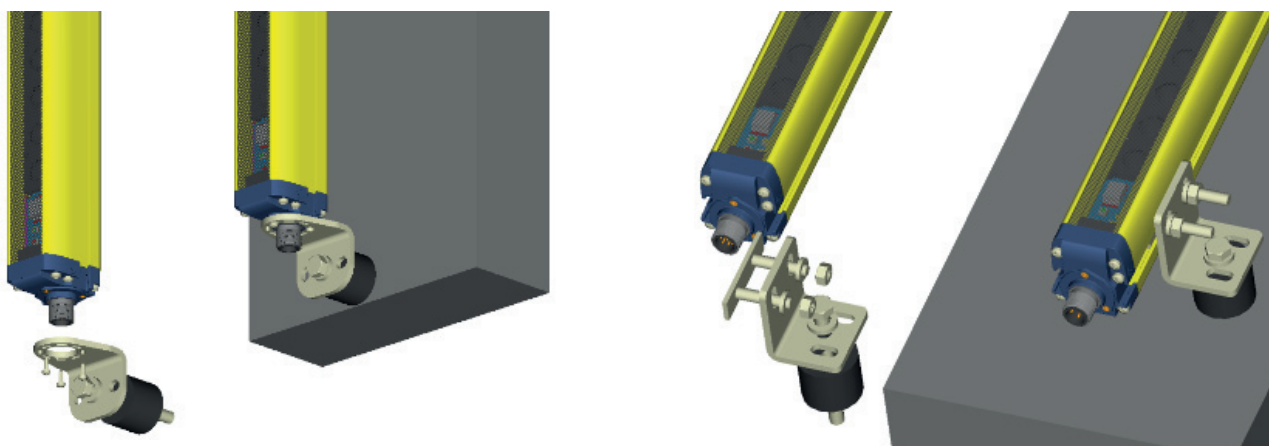


Fig. 15

The recommended mounting positions according to the light curtain length are shown in Fig.15 and in the following table.

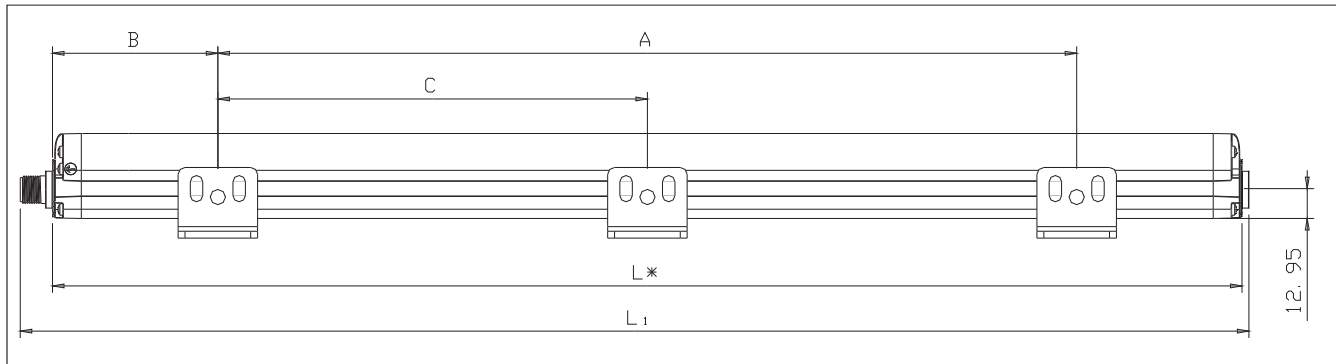

Models	L (mm)	A (mm)	B (mm)	C (mm)
SC4-ED-14-150-D6	216.3	108	54	-
SC4-ED-14-300-D6	366.2	216	75	-
SC4-ED-14-450-D6	516.3	316	100	-
SC4-ED-14-600-D6	666.2	366	150	-
SC4-ED-14-750-D6	816.3	466	175	-
SC4-ED-14-900-D6	966.2	566	200	-
SC4-ED-14-1050-D6	1116.2	666	225	-
SC4-ED-14-1200-D6	1266.3	966	150	483


Models	L (mm)	A (mm)	B (mm)	C (mm)
SC4-ED-30-300-D19	216.3	108	54	-
SC4-ED-30-450-D19	366.2	216	75	-
SC4-ED-30-600-D19	516.3	316	100	-
SC4-ED-30-750-D19	666.2	366	150	-
SC4-ED-30-900-D19	816.3	466	175	-
SC4-ED-30-1050-D19	966.2	566	200	-
SC4-ED-30-1200-D19	1116.2	666	225	-
SC4-ED-30-1350-D19	1266.3	966	150	483
SC4-ED-30-1500-D19	1566.3	1166	175	533
SC4-ED-30-1650-D19	1716.3	1266	225	633



## 4. Electrical Connection


All electrical connections to the emitting and receiving units are made through a male M12 connector, located on the lower part of the two units. For receiver a M12 8-pole connector is used, while for emitter a M12 4-pole connector is used.

### RECEIVER (RX):

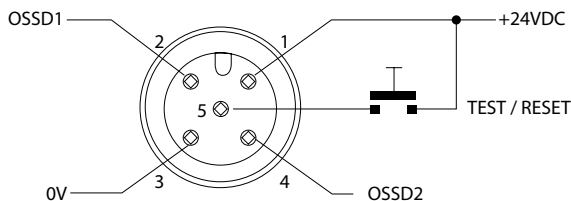

- 1 = White = RESET / RESTART
- 2 = Brown = 24VDC
- 3 = Green = EDM SELECTION
- 4 = Yellow = EDM
- 5 = Grey = OSSD1
- 6 = Pink = OSSD2
- 7 = Blue = 0V
- 8 = Red = MANUAL / AUTOMATIC RESTART

### EMITTER (TX):

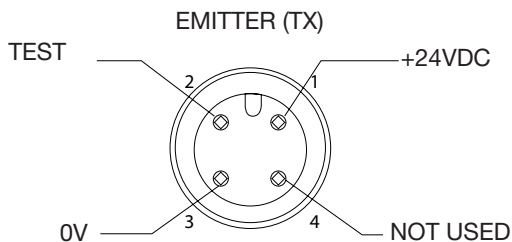

- 1 = Brown = +24VDC
- 2 = White = NOT USED
- 3 = Blue = 0V
- 4 = Black = NOT USED



Function	Connection to	Status
Test	+24VDC	TEST ON
	Not connected or 0V	TEST OFF
Reset	+24VDC	RESET ON
	Not connected or 0V	RESET OFF
EDM	Normally closed contact for a force guided relay	EDM is active
	Not connected or 0V	EDM is not active
EDM selection	+24VDC	EDM OFF
	Not connected or 0V	EDM ON
Man / Auto Restart	OSSD1	Automatic Restart
	OSSD2	Manual Restart

## 4.1. Notes of Connections

For the correct functioning of the SC4 safety light curtains, the following precautions regarding the electrical connections have to be respected:

- Do not place connection cables in contact with or near high-voltage cables and/or cable undergoing high current variations (e.g. motor power supplies, inverters, etc.);
- Do not connect in the same multi-pole cable the OSSD wires of different light curtains;
- The TEST wire must be connected through a N.O. button to the supply voltage of the ESPE.
- The RESET/RESTART wire must be connected through a N.O. button to the supply voltage of the ESPE.

**⚠ The TEST button must be located in such a way that the operator can check the protected area during any test (see section 6 “Functioning mode”).**

**⚠ The RESET/RESTART button must be located in such a way that the operator can check the protected area during any reset operation (see section 6 “Functioning mode”).**

- The device is already equipped with internal overvoltage and overcurrent suppression devices. The use of other external components is not recommended.

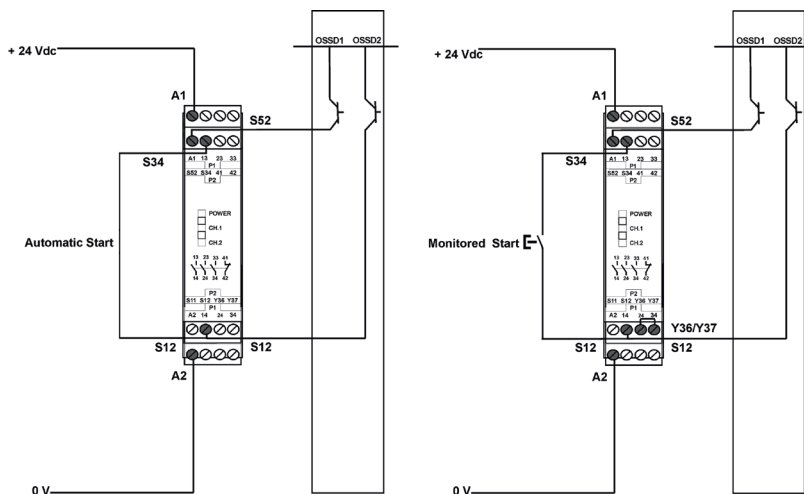


Fig. 16

The figures show the connection between the safety light curtains and a safety relay functioning in the Automatic Restart mode (left side) and Manual Restart with monitoring (right side).

- Do not use varistors, RC circuits or LEDs in parallel at relay inputs or in series at OSSD outputs.
- The OSSD1 and OSSD2 safety contacts cannot be connected in series or in parallel, but can be used separately (Fig.17), conforming to the plant’s safety requirements.

If one of these configurations is erroneously used, the device enters into the output failure condition (see section 7 “Diagnostic functions”).



- Connect both OSSDs to the activating device. Failure to connect an OSSD to the activating device jeopardises the system safety degree that the light curtain has to control

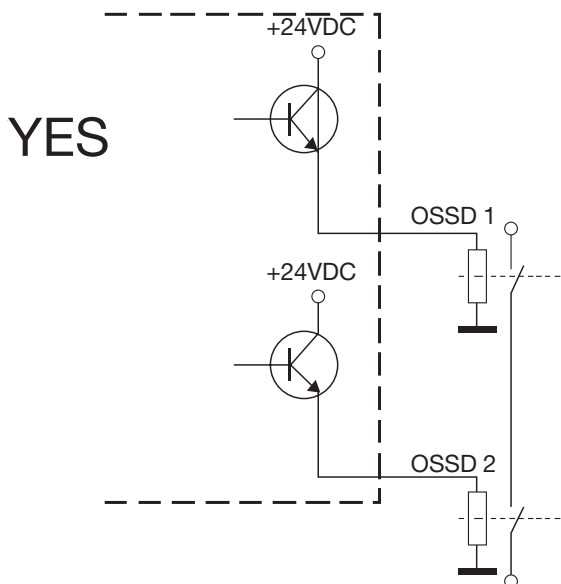


Fig. 17

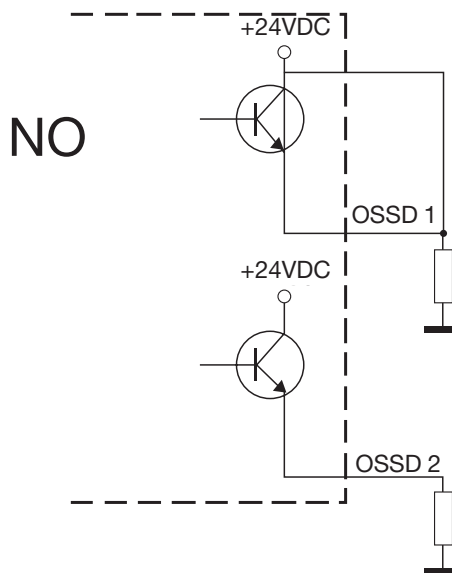


Fig. 18

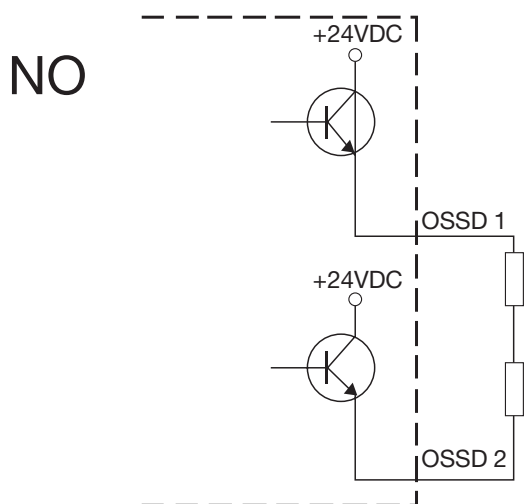


Fig. 19

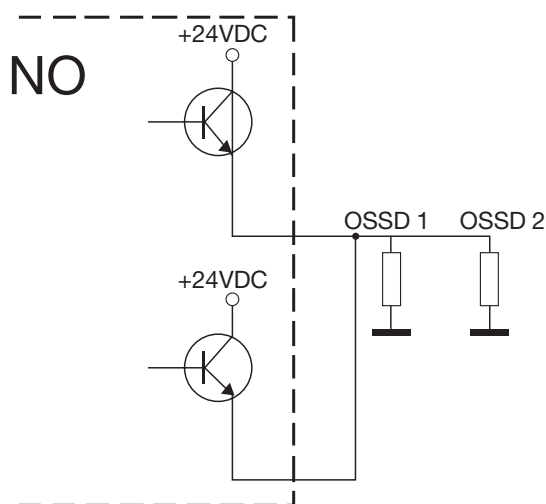


Fig. 20



## 4.2. Ground Connection

SC4 safety light curtain units are preset for easy ground connection. A special compartment, positioned onto caps and marked with the special symbol shown in Figure 21, allows connection with ground cable by means of an additional screw coming with the equipment.

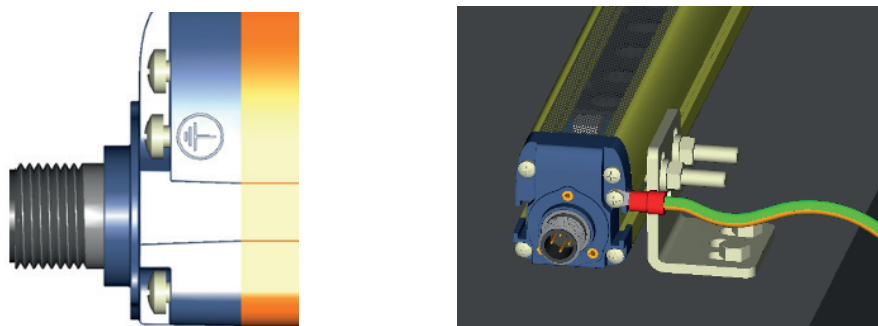


Fig. 21

Ground connection configuration is the most common and guarantees the best immunity against electromagnetic disturbances. SC4 can function even without ground connection. This condition has to be carefully evaluated according to the EMC disturbance immunity and necessary insulation class considering the plant or entire system where the light curtain is installed.

- The ground connection of the two units is not necessary for Class III, while the use of a duly-insulated low-voltage feeder type SELV or PELV is compulsory. In this case, it's mandatory to cover the earth symbol present on the caps of the two units with a blank sticker.
- The ground connection of the two units is compulsory for Class I, while the use of a duly-insulated feeder type SELV or PELV is not compulsory but anyway recommended.

The following table is a summary of SC4 electrical protections.

Electrical protection	Class I	Class III
Ground connection	Compulsory	Not necessary
Ground connection symbol	Compulsory	Not necessary
Power supply by generators SELV / PELV	Recommended	Compulsory



## 5. Alignment Procedure

The alignment between the emitting and the receiving units is necessary to obtain the correct functioning of the light curtain.

A good alignment prevents outputs instability caused by dust or vibrations.

The alignment is perfect if the optical axes of the first and the last emitting unit's beams coincide with the optical axes of the corresponding elements of the receiving unit.

The beam used to synchronise the two units is the closest one to the connector. SYNC is the optics connected with this beam and LAST is the optics connected to the last beam after the SYNC unit.

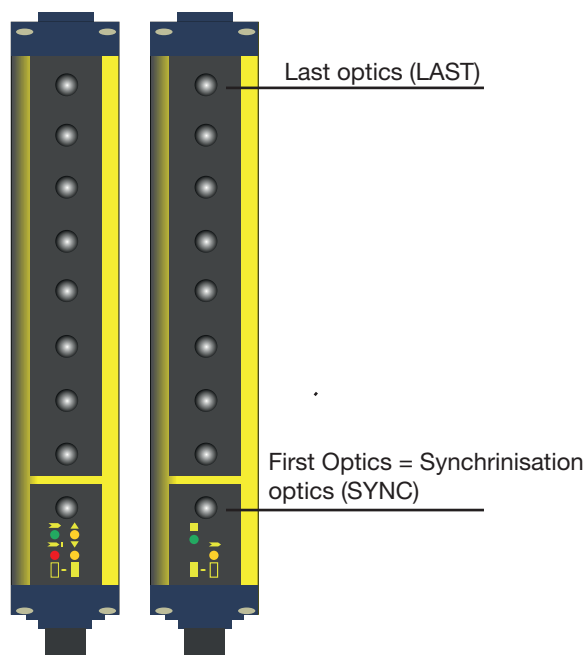


Fig. 22

Signals are clearly identified through symbols allowing their immediate reading, independent of bars directions; a short description of LEDs signals proves nevertheless necessary so as to avoid misunderstandings.

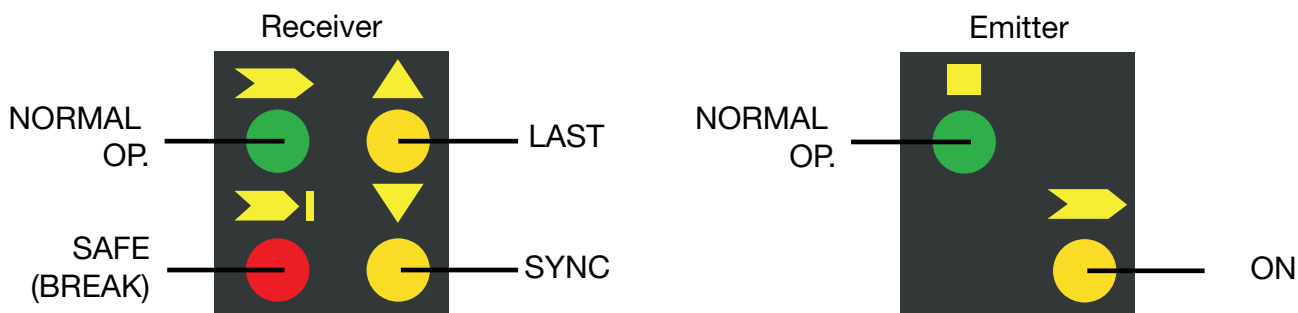


Fig. 23

The standard installation described hereinafter is the one shown in Fig. 22, i.e. with the bar assembled with the connectors pointing down.



## 5.1. Correct Alignment Procedure

The light curtain alignment can be effected only after having completed the mechanical installation and the electrical connections as described above. Compare alignment results with those given in the following table.

**NOTE:** To enter alignment mode connect the device as described in section 6.5 “Alignment aid function”.


 
Display	LED ➡ Normal Op.	LED ➡ I Safe (Break)	LED yellow ▼ SYNC	LED yellow ▲ LAST	Condition	Alignment Status
	OFF	ON	ON	ON	Sync NOK Last NOK	NO align
			OFF		Sync OK Last NOK	
			OFF	OFF	Sync OK Last OK Middle optics NOK	
	ON	OFF	OFF	OFF	Each beam is over the min. operating threshold and the number of beam over the threshold is included between 0 and 25%	MINIMUM align
	ON	OFF	OFF	OFF	Each beam is over the min. operating threshold and the number of beam over the threshold is included between 25 and 50%	
	ON	OFF	OFF	OFF	Each beam is over the min. operating threshold and the number of beam over the threshold is included between 50 and 75%	
	ON	OFF	OFF	OFF	Each beam is over the min. operating threshold and the number of beam over the threshold is included between 75 and 100%	MAXIMUM align.

- A Keep the receiver in a steady position and set the emitter until the yellow LED (▼ SYNC) is OFF. This condition shows the effective alignment of the first beam (synchronisation beam).
- B Rotate the emitter, pivoting on the lower optics axis, until the yellow LED (▲ LAST) is OFF.

NOTE: Ensure that the green LED (➡ NORMAL OP.) is steady ON.

- C **Delimit the area in which the green LED (➡) is steady through some micro adjustments - for the first and then for the second unit - so to have the maximum alignment (4) and then place both units in the centre of this area.**



- D Fix the two units firmly using brackets. Verify that the green LED (  ) on the RX unit is ON and beams are not interrupted, then verify that the red LED turns ON if even one single beam is interrupted SAFE (BREAK)  I , condition where an object has been detected). This verification shall be made with the special cylindrical “Test Piece” having a size suitable to the resolution of the device used (refer to paragraph 2.2.6 “Controls after first installation”).
- E Switch OFF and ON the device in standard operating mode.

The alignment level is monitored also during device normal operation mode via display (see paragraph 7.2 on the manual inside of the attached CD-ROM).

Once the curtain has been aligned and correctly fastened, the display signal is useful both to check the alignment and show a change in the environmental conditions (occurrence of dust, light disturbance and so on) via signal level monitoring.



## 6. Function Mode

### 6.1. Reset Mode

The interruption of a beam due to an opaque object causes the opening of OSSD outputs and the stop of the safety light curtain, SAFE (BREAK) condition ➡ I


ESPE standard operation can be reset (OSSD safety contact closing = NORMAL OP. condition, ➡ ) in two different ways:

- Automatic Restart, After activation, ESPE resets to standard operating condition once the object has been removed from the controlled area.
- Manual Restart, After activation, ESPE resets to standard operating condition only once the reset function has been enabled and provided that the object has been removed from the controlled area. This condition, called interlock, is signalled on the display (see paragraph 7.2)

**⚠WARNING:** Carefully assess risk conditions and restart modes.

In applications protecting access to dangerous areas, the automatic restart mode is potentially unsafe if it allows the operator to pass completely beyond the sensitive area. In this case, the manual restart or, for example, the manual restart of a relay (paragraph 4.1 “Notes on connections”) is necessary.

#### Time chart (Manual Restart)

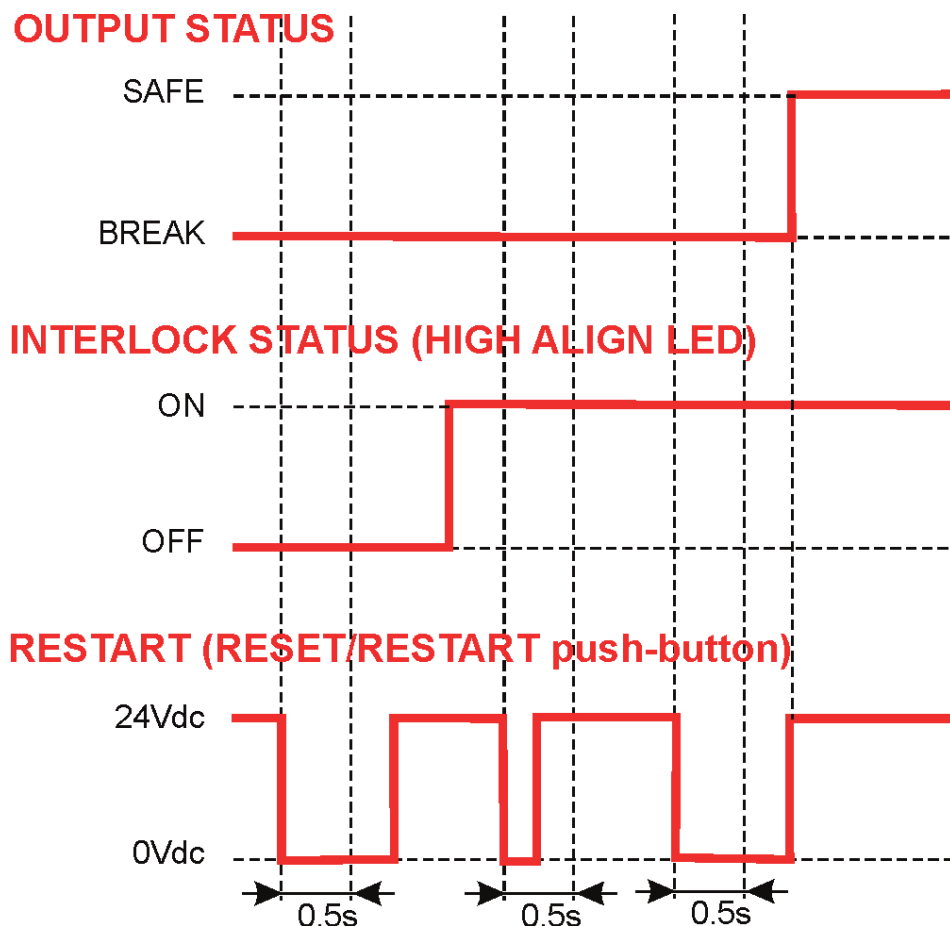




## 6.2. Test Function

The TEST function can be activated by keeping a normally open external contact (TEST push-button), closed for at least 0.5 seconds.


The TEST signal is active high.

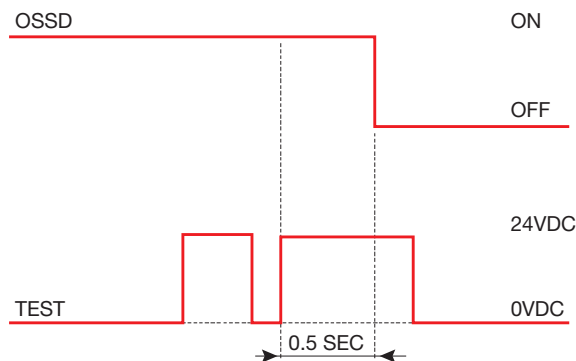

## 6.3. Reset Function

The RX light curtain has a RESET function which is activated after an internal error. It can be reset only in case of optical error, OSSD or EDM error or selection of manual/automatic reset (see section 7 “Diagnostic functions”).

The RESET function can be activated by keeping a normally open external contact (RESET/RESTART push-button), closed for at least 5 seconds. The RESET signal is active high.

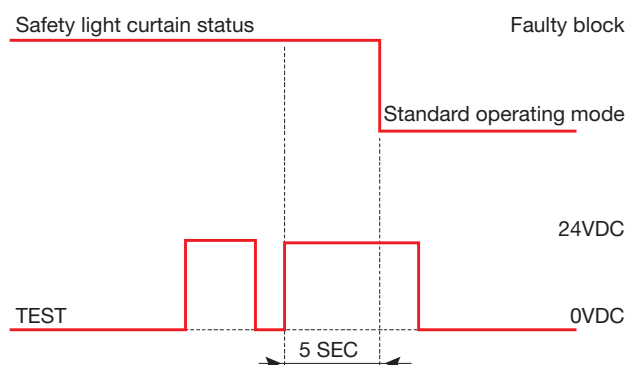

## 6.4. EDM Function

The light curtain has a function for monitoring actuation external devices (EDM). This function can be enabled or deactivated.

### EDM enabled:

- Disconnect or connect to the ground pin 3 of receiver M12 8-pole connector (EDM enabling = ON).


- Connect EDM input (pin 4 of M12 8-pole – RX) to a 24 VDC normally closed contacts of the device to be monitored.

**NOTE:** The decimal dot on the display shows that the function is enabled.

### EDM deactivated:


- Connect to 24 VDC pin 3 of receiver M12 8-pole connector (EDM enabling = OFF).

- Disconnect or connect to the ground EDM input (pin 4 of M12 8-pole - RX).

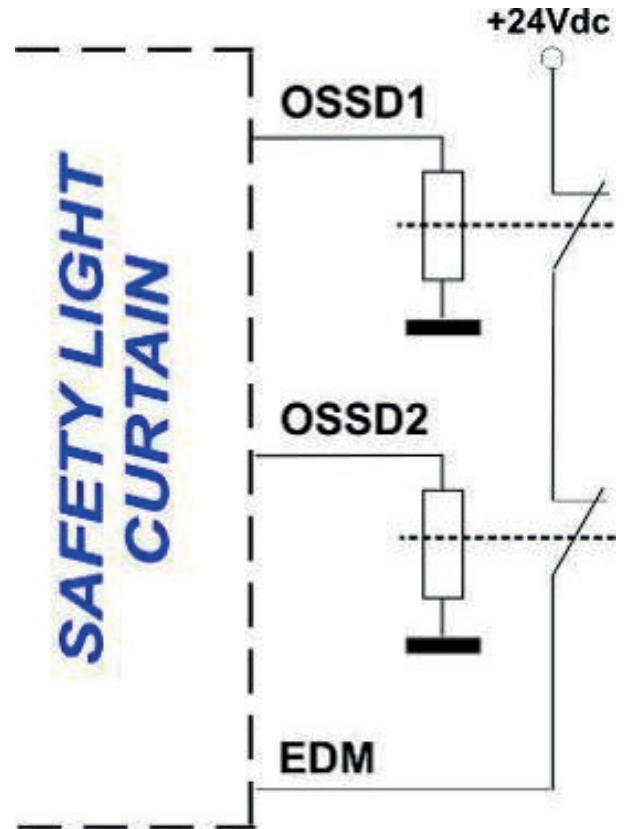

This function checks normally closed contact switch on OSSD status change.

### OSSD STATUS

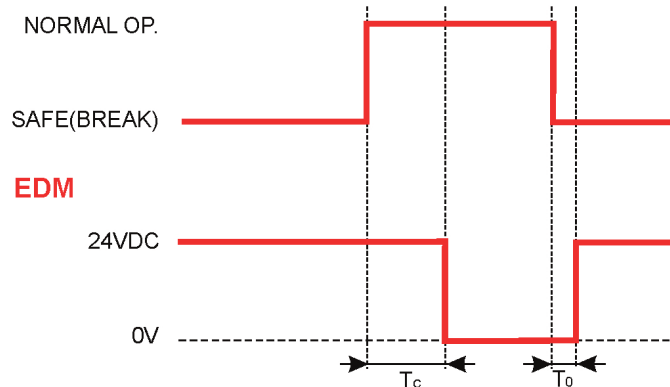

$T_c \geq 350$  msec: 350 msec: time after OSSD OFF-ON switch when EDM test is performed.  
 $T_o \leq 100$  msec: time after OSSD ON-OFF switch when EDM test is performed.



## 6.5. Alignment aid Function

SC4 light curtain is fitted with a system which informs the user about reached alignment degree. The alignment function can be selected on device starting by keeping closed RESET/RESTART N.O. contact for at least 0.5 seconds (Fig.24).

### Alignment mode timing

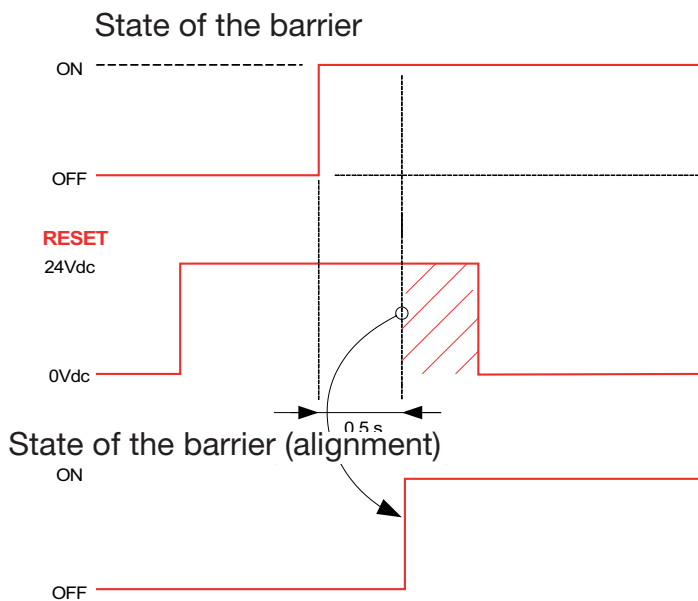


Fig. 24

Once optimal alignment has been reached, the device can return to normal functioning by powering off and then powering on the RX unit.

The alignment level is monitored also during device normal operating mode via display (see paragraph 7.2). Once the curtain has been aligned and correctly fastened, the display signal is useful to check the alignment and view any change in the environmental conditions (presence of dust, light disturbance and so on).

**NOTE:** OSSDs are not enabled on alignment mode.



# 7. Diagnostic functions

## 7.1. User Interface

Curtain operating status is visualised through an one-digit display present on both the receiver and emitter units.

SCG4-B also has four LEDs on the receiver and two LEDs on the emitter.

Fig.25 shows all LEDs signalling modes: OFF, ON and BLINKING.

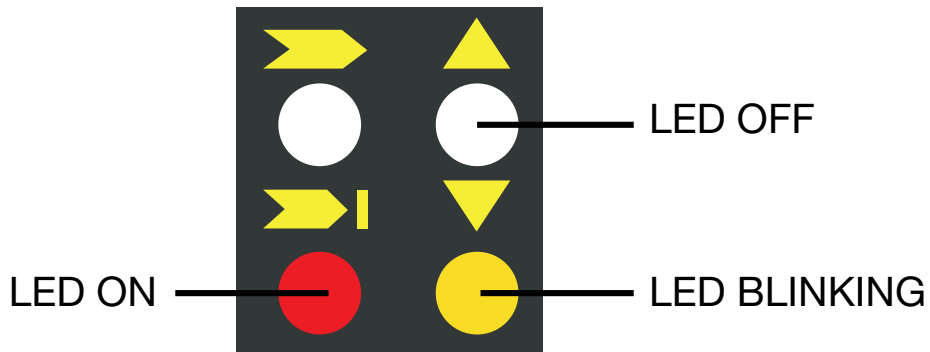













Fig. 25

## 7.2. Diagnostic Message

For Receiver:

Function	Status	Meaning	LED	DIGIT
Normal operation	Alignment	See section 5		A
	TEST (red ON)	Light curtain being tested. OSSD status shall be OFF		
	Emission (OSSD ON) (green ON)	Light curtain working and in safety block conditions.		
	Interruption (OSSD OFF) (red ON)	Light curtain working in safety block conditions.		
	Interlock Beams free (red ON yellow ON)	Light curtain in interlock, waiting for restart. OSSD status must be OFF		!
	Interlock Beams interrupted (red ON yellow ON)	Light curtain in interlock. OSSD status must be OFF		
	Signal level	Minimum (1 bar) Medium (2 bar) Maximum (3 bar)		- -- ---
	EDM enabled	EDM function is selected		



Function	Status	Meaning	LED	DIGIT
<b>Error status</b>	OSSD error (red ON)	Check OSSD connections. Make sure that they are not in contact with one another or with the supply cables, then Reset. If the failure continues contact Carlo Gavazzi		<i>FO</i>
	Internal error (red ON)	Switch OFF and switch ON the power supply circuit. If the failure continues contact Carlo Gavazzi		<i>FU</i>
	Optical error (red ON)	Reset. If the failure continues contact Carlo Gavazzi		<i>Fb</i>
	EDM error (red ON)	Check EDM connections and lines. If the failure continues contact Carlo Gavazzi		<i>FE</i>
	Restart selection error (red ON)	Check the man/auto restart connection. If the failure continues contact Carlo Gavazzi		<i>Fr</i>
	No power supply (LEDs OFF)	Check connections and input voltage value. If the failure continues contact Carlo Gavazzi		
Function	Status	Meaning	LED	DIGIT
<b>Normal operation</b>	TEST (green ON)	Light curtain being tested. OSSD status on the receiver must be OFF		<i>L</i>
	Emission (green ON, yellow ON)	Light curtain in normal operating condition		
Function	Status	Meaning	LED	DIGIT
<b>Error status</b>	Internal error (green ON)	Switch OFF and switch ON the power supply circuit. If the failure continues contact Carlo Gavazzi		<i>FU</i>
	Optical error (green ON)	Switch OFF and switch ON the power supply circuit. If the failure continues contact Carlo Gavazzi		<i>Fb</i>
	No power supply (LEDs OFF)	Check connections and input voltage correct value. If the failure continues contact Carlo Gavazzi		



For Emitter:

Function	Status	Meaning	LED	DIGIT
<b>Normal operation</b>	TEST (green ON)	Light curtain being tested. OSSD status on the receiver must be OFF		
	Emission (green ON yellow ON)	Light curtain in normal operating condition		
Function	Status	Meaning	LED	DIGIT
<b>Error status</b>	Internal error (green ON)	Switch OFF and switch ON the power supply circuit. If the failure continues contact Carlo Gavazzi		
	Optical error (green ON)	Switch OFF and switch ON the power supply circuit. If the failure continues contact Carlo Gavazzi		
	No power supply (LEDs OFF)	Check connections and input voltage correct value. If the failure continues contact Carlo Gavazzi		



## 8. Periodical Checks

The following is a list of recommended check and maintenance operations that should be periodically carried out by qualified personnel.

Check that:

- The ESPE stays locked (▶ I) during beam interruption along the entire protected area, using the suitable “Test Piece”. (\*)
- The ESPE is correctly aligned: by slightly pressing product side, in both directions, the red LED shall not come ON ▶ I.
- Enabling the TEST function, the OSSD outputs should open (the red LED ▶ I is ON and the controlled machine stops).
- The response time upon machine STOP (including response time of the ESPE and of the machine) is within the limits defined for the calculation of the safety distance (see section 2 “Installation mode”).
- The safety distance between the dangerous areas and the ESPE are in accordance with the instructions included in section 2 “Installation mode”.
- Access of a person between ESPE and machine dangerous parts is not possible nor is it possible for him/her to stay there.
- Access to the dangerous area of the machine from any unprotected area is not possible.
- The ESPE and the external electrical connections are not damaged.

The frequency of checks depends on the particular application and on the operating conditions of the safety light curtain.

(\*) according to the Fig.12 scheme

Verify that:

- ESPE remains blocked (▶ I) intercepting the beams along the protected area using the specific test piece, following the Fig.12 scheme.

**TP14 for light curtains with 14 mm resolution: SC4-ED-14-150-D6**

**TP30 for light curtains with 30 mm resolution: SC4-ED-30-300-D19**



## 8.1. General Information and Useful Data

---

Safety **MUST** be a part of our conscience.

The safety devices fulfil their safety function only if they are correctly installed, in accordance with the Standards in force.

If you are not certain to have the expertise necessary to install the device in the correct way, Carlo Gavazzi Customer Service is at your disposal to carry out the installation.

The device uses fuses that are not self-resetting. Consequently, in presence of short-circuits causing the cut-off of these fuses, both units shall be sent to Carlo Gavazzi service department.

A power failure caused by interferences may cause the temporary opening of the outputs, but the safe functioning of the light curtain will not be compromised.

## 8.2. Warranty

---

Carlo Gavazzi guarantees each brand new SC4 system, under standard use conditions, against manufacturing defects in material and workmanship for a period of 36 (thirty-six) months from the date of manufacturing.

Carlo Gavazzi will not be liable for any damages to persons and things caused by failure to stick to the correct installation modes and device use.

Warranty validity is subject to the following conditions:

- User shall notify Carlo Gavazzi the failure within thirty-six months from product manufacturing date.
- Failure or malfunction shall not have been originated directly or indirectly by:
  - use for unsuitable purposes;
  - failure to comply with the intended use prescriptions;
  - negligence, unskillfulness, wrong maintenance;
  - repairing, changes, adaptations not made by Carlo Gavazzi personnel, tampering with the device, etc.;
- accidents or crashes (even due to transportation or by force majeure causes);
- other causes not depending from Carlo Gavazzi

If the device does not work, send both units (receiver and emitter) to Carlo Gavazzi. The Customer is responsible for all transport charges and damage risks or material loss during transport, unless otherwise agreed.

All replaced products and parts become a property of Carlo Gavazzi.

Carlo Gavazzi does not accept any warranty or right other than the above-described ones. No requests for compensation for expenses, activities stop or other factors or circumstances somehow connected to the failure of the product or one of its parts to operate cannot be put forward for any reason.

In case of problems, please contact Carlo Gavazzi Service Department:

Tel: +39 02 931 761

Fax: +39 02 931 763 01



## 9. Device Maintenance

SC4 safety light curtains do not require special maintenance operations.

To avoid the reduction of the operating distance, optic protective front surfaces must be cleaned at regular intervals.

Use soft cotton cloths damped in water.

Do not apply too much pressure on the surface in order to avoid making it opaque.

Please do not use on plastic surfaces or light curtain painted surfaces:

- Alcohol or solvents
- Wool or synthetic cloths
- Paper or other abrasive materials

### 9.1. Product Disposal

---

Under current Italian and European laws, Carlo Gavazzi is not obliged to take care of product disposal at the end of its life.

Carlo Gavazzi recommends to dispose of the product in compliance with local laws or contact authorised waste collection centres.



# 10. Technical Data

<b>ELECTRICAL DATA</b>	
Power supply (Vdd):	24 Vdc ± 20%
Unit current draw (TX):	2.5 W max
Unit current draw (RX):	3.5 W max (without load)
Outputs:	2 PNP
Short-circuit protection:	1.4 A max
Output current:	0.5 A max / each output
Output voltage - status ON:	Vdd - 1 V min
Output voltage - status OFF:	0.2 V max
Capacitive load:	2.2 uF @ 24VDC max
Response times:	See table below
Protected height:	150... 1800mm
Safety category:	Type 4
Auxiliary functions:	Test; manual/automatic restart; EDM; RESET
Electrical protection:	Class I / Class III
Connections:	M12-4 poles for emitter M12-8 poles for receiver
Cables length (for power supply):	50 m. max
<b>OPTICAL DATA</b>	
Emitting light :	Infrared, LED (950 nm)
Resolution:	14 - 30 mm
Operating distance:	0.2...19m for 30 mm 0.2... 6 m for 14 mm
Ambient light rejection:	IEC-61496-2
<b>MECHANICAL AND ENVIRONMENTAL DATA</b>	
Operating temperature:	0... + 55°C
Storage temperature:	-25... + 70°C
Temperature class	T6
Humidity:	15... 95% (no condensation)
Mechanical protection:	IP 65 (EN 60529)
Vibrations:	Width 0.35 mm, Frequency 10 ... 55 Hz 20 sweep per axis, 1 octave/min (EN 60068-2-6)
Shock resistance:	16 ms (10 G) 1,000 shocks per axis (EN 60068-2-29)
Housing material:	Painted aluminium (yellow RAL 1003)
Front side material:	PMMA
Caps material:	PC MAKROLON
Weight (single unit):	1.3 kg / meter for each single unit



# 11. List of Available Models

Model	Protected height (mm)	No beams	Response time (msec)	Resolution (mm)
SC4-ED-14-150-D6	150	16	11	14
SC4-ED-14-300-D6	300	32	15	14
SC4-ED-14-450-D6	450	48	18	14
SC4-ED-14-600-D6	600	64	22	14
SC4-ED-14-750-D6	750	80	25	14
SC4-ED-14-900-D6	900	96	29	14
SC4-ED-14-1050-D6	1050	112	33	14
SC4-ED-14-1200-D6	1200	128	36	14
SC4-ED-30-300-D19	300	16	11	30
SC4-ED-30-450-D19	450	24	13	30
SC4-ED-30-600-D19	600	32	14	30
SC4-ED-30-750-D19	750	40	16	30
SC4-ED-30-900-D19	900	48	18	30
SC4-ED-30-1050-D19	1050	56	19	30
SC4-ED-30-1200-D19	1200	64	21	30
SC4-ED-30-1350-D19	1350	72	23	30
SC4-ED-30-1500-D19	1500	80	25	30
SC4-ED-30-1650-D19	1650	88	26	30






	EN ISO 13849-1:2008	EN 954-1	EN IEC 61508	EN IEC 62061	Prob. of danger failure/hour	Life span	Mean time to dangerous failure	Average diagnostic coverage	Safe failure fraction	Hardware fault tolerance
Product	PL	CAT	SIL	SIL CL	PFHd (1/h)	T1 (years)	MTTFd (years)	DC	SFF	HFT
SC4-ED-14-150-D6	e	4	3	3	2,64E-09	20	444	98,80%	99,30%	1
SC4-ED-14-300-D6	e	4	3	3	2,64E-09	20	444	98,80%	99,30%	1
SC4-ED-14-450-D6	e	4	3	3	2,64E-09	20	444	98,80%	99,30%	1
SC4-ED-14-600-D6	e	4	3	3	2,64E-09	20	444	98,80%	99,30%	1
SC4-ED-14-750-D6	e	4	3	3	2,64E-09	20	444	98,80%	99,30%	1
SC4-ED-14-900-D6	e	4	3	3	2,64E-09	20	444	98,80%	99,30%	1
SC4-ED-14-1050-D6	e	4	3	3	2,64E-09	20	444	98,80%	99,30%	1
SC4-ED-14-1200-D6	e	4	3	3	2,64E-09	20	444	98,80%	99,30%	1
SC4-ED-30-300-D19	e	4	3	3	2,64E-09	20	444	98,80%	99,30%	1
SC4-ED-30-450-D19	e	4	3	3	2,64E-09	20	444	98,80%	99,30%	1
SC4-ED-30-600-D19	e	4	3	3	2,64E-09	20	444	98,80%	99,30%	1
SC4-ED-30-750-D19	e	4	3	3	2,64E-09	20	444	98,80%	99,30%	1
SC4-ED-30-900-D19	e	4	3	3	2,64E-09	20	444	98,80%	99,30%	1
SC4-ED-30-1050-D19	e	4	3	3	2,64E-09	20	444	98,80%	99,30%	1
SC4-ED-30-1200-D19	e	4	3	3	2,64E-09	20	444	98,80%	99,30%	1
SC4-ED-30-1350-D19	e	4	3	3	2,64E-09	20	444	98,80%	99,30%	1
SC4-ED-30-1500-D19	e	4	3	3	2,64E-09	20	444	98,80%	99,30%	1
SC4-ED-30-1650-D19	e	4	3	3	2,64E-09	20	444	98,80%	99,30%	1



# 12. Overall Dimensions

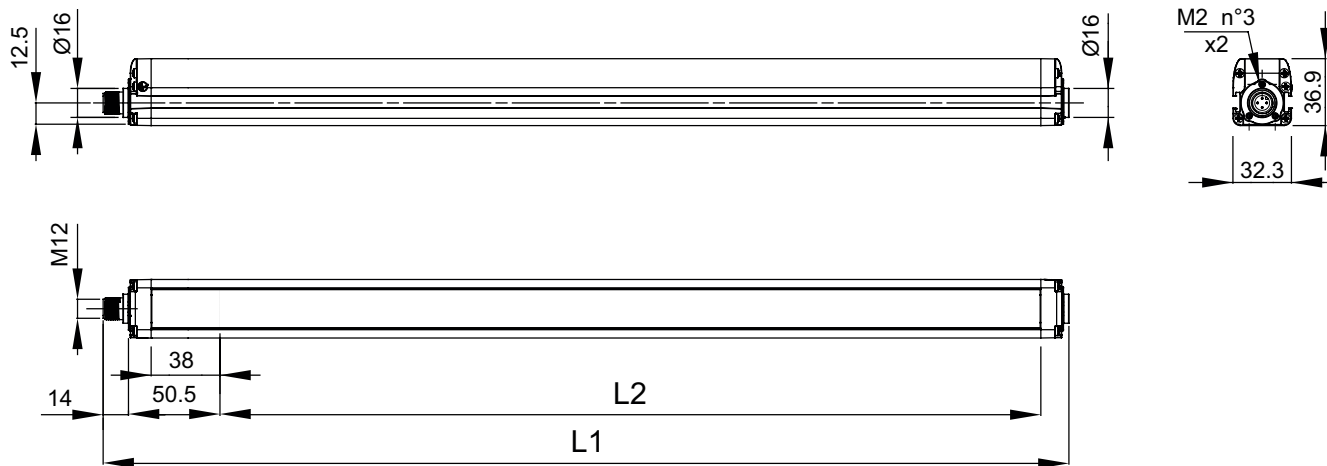

Model	L <sub>1</sub>	L <sub>2</sub>
SC4-ED-14-150-D6	233.3	153.3
SC4-ED-14-300-D6	383.2	303.2
SC4-ED-14-450-D6	533.2	453.3
SC4-ED-14-600-D6	683.2	603.2
SC4-ED-14-750-D6	833.2	753.3
SC4-ED-14-900-D6	983.2	903.2
SC4-ED-14-1050-D6	1133.2	1053.2
SC4-ED-14-1200-D6	1283.3	1203.3
SC4-ED-14-1350-D6	1433.2	1353.2



Model	L <sub>1</sub>	L <sub>2</sub>
SC4-ED-30-300-D19	383.2	303.2
SC4-ED-30-450-D19	533.2	453.3
SC4-ED-30-600-D19	683.2	603.2
SC4-ED-30-750-D19	833.2	753.3
SC4-ED-30-900-D19	983.2	903.2
SC4-ED-30-1050-D19	1133.2	1053.2
SC4-ED-30-1200-D19	1283.3	1203.3
SC4-ED-30-1350-D19	1433.2	1353.2
SC4-ED-30-1500-D19	1583.3	1503.3
SC4-ED-30-1650-D19	1733.3	1653.3



# 13. Accessories

Model	Description
SC FB4P	Std mounting brackets 4 pcs kit
SC AV4P	Anti Vibration supports 4 pcs kit
SC AV6P	Anti Vibration supports 6 pcs kit
SC OS4P	Orientable Supports 4 pcs kit
SC OS6P	Orientable Supports 6 pcs kit

## 13.1. Angled Fixing Bracket

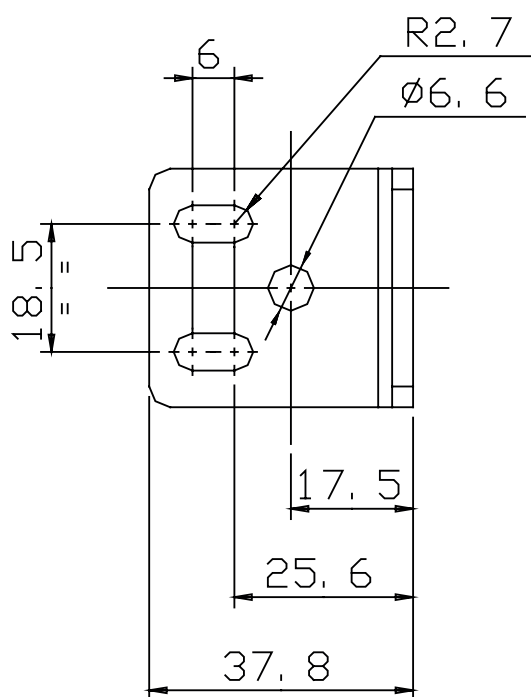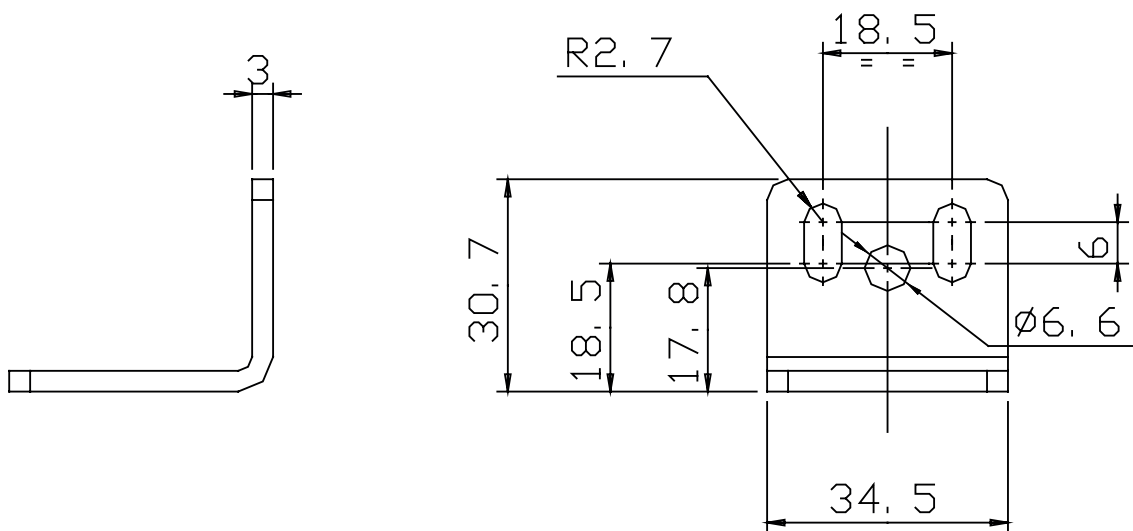





## Angled Fixing Bracket Mounting




Angled fixing bracket

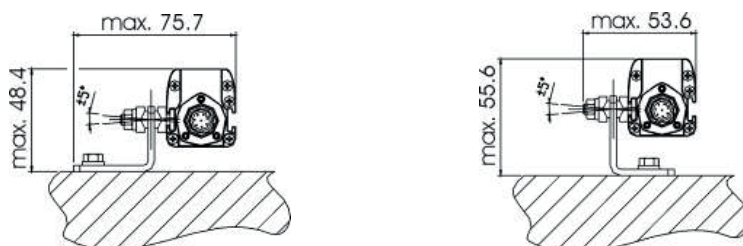

Angled fixing bracket + Adjustable support

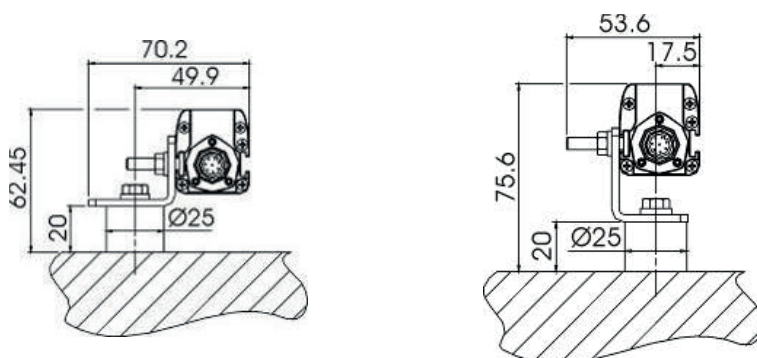

Angled fixing bracket + Adjustable support

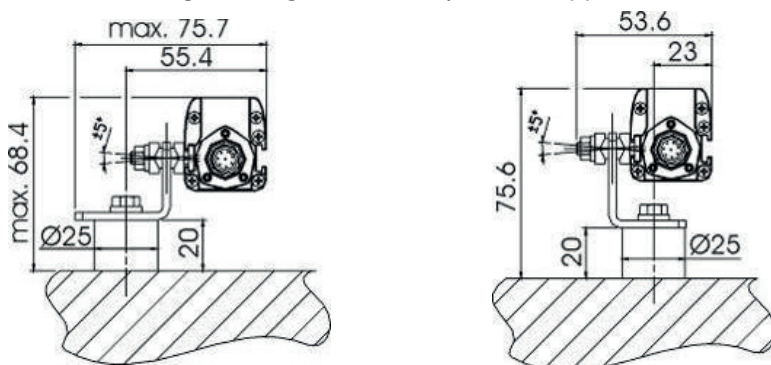

Angled fixing bracket + Adjustable support + Antivibration support



## 13.2. Test Piece

---

Model	Description
SC TP14	Test Piece Ø 14mm L = 300mm
SC TP30	Test Piece Ø 30mm L = 300mm

## 13.3. Connection Cables

---



## 14. Glossary

**ACTIVE OPTOELECTRONIC PROTECTIVE DEVICE (AOPD):** its detection function is achieved thanks to the use of optoelectronic receivers and emitters detecting the optical beams interruptions inside the device caused by an opaque object present inside the specified detecting area.

An active optoelectronic protective device (AOPD) can operate both in emitter-receiver mode and in retro-reflective light curtains.

**BLOCK CONDITION (=BREAK):** status of the light curtain taking place when a suitably-sized opaque object (see DETECTING CAPACITY) interrupts one or several light curtain beams.

Under these conditions, OSSD1 and OSS2 light curtain outputs are simultaneously switched OFF within the device response time.

**CONTROLLED MACHINE:** machine having the potentially-dangerous points protected by the light curtain or by another safety system.

**CROSSING HAZARD:** situation under which an operator crossing the area controlled by the safety device and this latter stops and keeps the machine stopped until the hazard is eliminated, and then enters the dangerous area. Now the safety device could not be able to prevent or avoid an unexpected restart of the machine with the operator still present inside the dangerous area.

**DANGEROUS AREA:** area representing an immediate or imminent physical hazard for the operator working inside it or who could get in contact with it.

**DETECTING CAPACITY (= RESOLUTION):** sensor function parameter limit as specified by the manufacturer, which activates the electro-sensitive protection equipment (ESPE). In case of an active optoelectronic protective device (AOPD), with resolution we mean the minimum dimension, which an opaque object must have in order to interrupt at least one of the beams that constitute the sensitive area.

**EDM:** see "External device monitoring" in the glossary.

**ELECTROSENSITIVE PROTECTIVE EQUIPMENT (ESPE):** assembly of devices and/or components working together to activate the protective disabling function or to detect the presence of something and including at least: a sensor, command/control devices and output signal switching devices.

**EMITTER:** unit emitting infrared beams, consisting of a set of optically-synchronised LEDs. The emitting unit, combined with the receiving unit (installed in the opposite position), generates an optical "curtain", i.e. the detecting area.

**EXTERNAL DEVICE MONITORING (EDM):** device used by the ESPE to monitor the status of the external command devices.

**FINAL SWITCHING DEVICE (FSD):** part of the control system involving machine safety conditions. It breaks the circuit to the machine primary control element (MPCE) when the output signal switching device (OSSD) becomes inactive.

**FORCE-GUIDED CONTACTS:** Contacts can be guided forcibly when they are connected mechanically so that they can switch simultaneously, when the input stage is active.

If one contact of the series remains "hanged", no other relay contact is able to move.

This function allows the control of the EDM status.

**MACHINE OPERATOR:** qualified person allowed to use the machine.

**MACHINE PRIMARY CONTROL ELEMENT (MPCE):** electrically-powered element having the direct control of machine regular operation so as to be the last element, in order of time, to operate when the machine has to be enabled or blocked.

**MIN. INSTALLATION DISTANCE:** min. distance necessary to allow machine dangerous moving parts to completely stop before the operator can reach the nearest dangerous point. This distance shall be measured from the middle point of the detecting area to the nearest dangerous point. Factors affecting min. installation distance value are machine stop time, total safety system response time and light curtain resolution.



**N.O.:** normally opened

**N.C.:** normally closed

**OFF STATUS:** status when the output circuit is interrupted and does not allow current stream.

**ON STATUS:** status when the output circuit is operational and allows current stream.

**OUTPUT SIGNAL SWITCHING DEVICE (OSSD):** part of the ESPE connected to machine control system. When the sensor is enabled during standard operating conditions, it switches to disabled status.

**PROTECTED AREA:** area where a specified test object is detected by the ESPE.

**PROTECTIVE DEVICE:** device having the function to protect the operator against possible risks of injury due to the contact with machine potentially-dangerous parts.

**QUALIFIED OPERATOR:** a person who holds a professional training certificate or having a wide knowledge and experience and who is acknowledged as qualified to install and/or use the product and to carry out periodical test procedures.

**RECEIVER:** unit receiving infrared beams, consisting of a set of optically-synchronised phototransistors. The receiving unit, combined with the emitting unit (installed in the opposite position), generates an optical "curtain", i.e. the detecting area.

**RESPONSE TIME:** max. time elapsing between the occurrence of the event leading to sensor activation and the reaching of the inactive state by the output signal switching device (OSSD).

**RESTART INTERLOCKING DEVICE (=RESTART):** device preventing machine automatic restart after sensor activation during a dangerous phase of machine operating cycle, after a change of machine operating mode, and after a variation in machine start control devices.

**RISK:** probability of occurrence of an injury and severity of the injury itself.

**SAFETY LIGHT CURTAIN:** it is an active optoelectronic protective device (AOPD) including an integrated system consisting of one or several emitting elements and one or several receiving elements forming a detection area with a detecting capacity specified by the supplier.

**START INTERLOCKING DEVICE (= START):** device preventing machine automatic start if the ESPE is live or the voltage is disabled and enabled once again.

**TEST PIECE:** opaque object having a suitable size and used to test safety light curtain correct operation.

**TYPE (OF ESPE):** the Electrosensitive Protective Equipment (ESPE) have different reactions in case of faults or under different environmental conditions. The classification and definition of the "type" (ex. type 2, type 4, according to IEC 61496-1) defines the minimum requirements needed for ESPE design, manufacturing and testing.

**WORKING POINT:** machine position where the material or semifinished product is worked.

## OUR SALES NETWORK IN EUROPE

**AUSTRIA** - Carlo Gavazzi GmbH  
Ketzergergasse 374, A-1230 Wien  
Tel: +43 1 888 4112  
Fax: +43 1 889 10 53  
office@carlogavazzi.at

**BELGIUM** - Carlo Gavazzi NV/SA  
Mechelsesteenweg 311, B-1800 Vilvoorde  
Tel: +32 2 257 4120  
Fax: +32 2 257 41 25  
sales@carlogavazzi.be

**DENMARK** - Carlo Gavazzi Handel A/S  
Over Hadstenvej 40, DK-8370 Hadsten  
Tel: +45 89 60 6100  
Fax: +45 86 98 15 30  
handel@gavazzi.dk

**FINLAND** - Carlo Gavazzi OY AB  
Petaksentie 2-4, FI-00661 Helsinki  
Tel: +358 9 756 2000  
Fax: +358 9 756 20010  
myynti@gavazzi.fi

**FRANCE** - Carlo Gavazzi Sarl  
Zac de Paris Nord II, 69, rue de la Belle  
Etoile, F-95956 Roissy CDG Cedex  
Tel: +33 1 49 38 98 60  
Fax: +33 1 48 63 27 43  
french.team@carlogavazzi.fr

**GERMANY** - Carlo Gavazzi GmbH  
Pfnorstr. 10-14  
D-64293 Darmstadt  
Tel: +49 6151 81000  
Fax: +49 6151 81 00 40  
info@gavazzi.de

**GREAT BRITAIN** - Carlo Gavazzi UK Ltd  
7 Springlakes Industrial Estate,  
Deadbrook Lane, Hants GU12 4UH,  
GB-Aldershot  
Tel: +44 1 252 339600  
Fax: +44 1 252 326 799  
sales@carlogavazzi.co.uk

**ITALY** - Carlo Gavazzi SpA  
Via Milano 13, I-20020 Lainate  
Tel: +39 02 931 761  
Fax: +39 02 931 763 01  
info@gavazziacbu.it

**NETHERLANDS** - Carlo Gavazzi BV  
Wijkmeerweg 23,  
NL-1948 NT Beverwijk  
Tel: +31 251 22 9345  
Fax: +31 251 22 60 55  
info@carlogavazzi.nl

**NORWAY** - Carlo Gavazzi AS  
Melkeveien 13, N-3919 Porsgrunn  
Tel: +47 35 93 0800  
Fax: +47 35 93 08 01  
post@gavazzi.no

**PORTUGAL** - Carlo Gavazzi Lda  
Rua dos Jerónimos 38-B,  
P-1400-212 Lisboa  
Tel: +351 21 361 7060  
Fax: +351 21 362 13 73  
carlogavazzi@carlogavazzi.pt

**SPAIN** - Carlo Gavazzi SA  
Avda. Iparraguirre, 80-82,  
E-48940 Leioa (Bizkaia)  
Tel: +34 94 480 4037  
Fax: +34 94 480 10 61  
gavazzi@gavazzi.es

**SWEDEN** - Carlo Gavazzi AB  
V:a Kyrkogatan 1,  
S-652 24 Karlstad  
Tel: +46 54 85 1125  
Fax: +46 54 85 11 77  
info@carlogavazzi.se

**SWITZERLAND** - Carlo Gavazzi AG  
Verkauf Schweiz/Vente Suisse  
Sumpfstrasse 32,  
CH-6312 Steinhausen  
Tel: +41 41 747 4535  
Fax: +41 41 740 45 40  
info@carlogavazzi.ch

## OUR SALES NETWORK IN AMERICA

**USA** - Carlo Gavazzi Inc.  
750 Hastings Lane,  
Buffalo Grove, IL 60089, USA  
Tel: +1 847 465 6100  
Fax: +1 847 465 7373  
sales@carlogavazzi.com

**CANADA** - Carlo Gavazzi Inc.  
2660 Meadowvale Boulevard,  
Mississauga, ON L5N 6M6, Canada  
Tel: +1 905 542 0979  
Fax: +1 905 542 22 48  
gavazzi@carlogavazzi.com

**MEXICO** - Carlo Gavazzi Mexico S.A. de C.V.  
Calle La Montaña no. 28, Fracc. Los Pastores  
Naucalpan de Juárez, EDOMEX CP 53340  
Tel & Fax: +52.55.5373.7042  
mexicosales@carlogavazzi.com

**BRAZIL** - Carlo Gavazzi Automação Ltda.  
Avenida Brig. Luís Antônio, 3067  
B. J. Paulista CEP 01401-000 São Paulo  
Tel: +55 11 3052 0832  
Fax: +55 11 3057 1753  
info@carlogavazzi.com.br

## OUR SALES NETWORK IN ASIA AND PACIFIC

**SINGAPORE** - Carlo Gavazzi Automation  
Singapore Pte. Ltd.  
61 Tai Seng Avenue  
#05-06 UE Print Media Hub  
Singapore 534167  
Tel: +65 67 466 990  
Fax: +65 67 461 980  
info@carlogavazzi.com.sg

**MALAYSIA** - Carlo Gavazzi Automation  
(M) SDN. BHD.  
D12-06-G, Block D12,  
Pusat Perdagangan Dana 1,  
Jalan PJU 1A/46, 47301 Petaling Jaya,  
Selangor, Malaysia.  
Tel: +60 3 7842 7299  
Fax: +60 3 7842 7399  
sales@gavazzi-asia.com

**CHINA** - Carlo Gavazzi Automation  
(China) Co. Ltd.  
Unit 2308, 23/F.,  
News Building, Block 1, 1002  
Middle Shennan Zhong Road,  
Shenzhen, China  
Tel: +86 755 83699500  
Fax: +86 755 83699300  
sales@carlogavazzi.cn

**HONG KONG** - Carlo Gavazzi  
Automation Hong Kong Ltd.  
Unit 3 12/F Crown Industrial Bldg.,  
106 How Ming St., Kwun Tong,  
Kowloon, Hong Kong  
Tel: +852 23041228  
Fax: +852 23443689

## OUR COMPETENCE CENTRES AND PRODUCTION SITES

Carlo Gavazzi Industri A/S  
Hadsten - **DENMARK**

Carlo Gavazzi Ltd  
Zejtun - **MALTA**

Carlo Gavazzi Controls SpA  
Belluno - **ITALY**

Uab Carlo Gavazzi Industri Kaunas  
Kaunas - **LITHUANIA**

Carlo Gavazzi Automation  
(Kunshan) Co., Ltd.  
Kunshan - **CHINA**

## HEADQUARTERS

Carlo Gavazzi Automation SpA  
Via Milano, 13 - I-20020  
Lainate (MI) - **ITALY**  
Tel: +39 02 931 761  
info@gavazziautomation.com



**CARLO GAVAZZI**  
Automation Components

*Energy to Components!*

www.gavazziautomation.com

