



EM210

COMMUNICATION PROTOCOL

Version 3 Revision 1

June 4th, 2014

Index

| | | |
|----------|---|-----------|
| 1.1 | Introduction | 3 |
| 1.2 | MODBUS functions | 3 |
| | <i>Function 03h (Read Holding Registers)</i> | 3 |
| | <i>Function 04h (Read Input Registers)</i> | 4 |
| | <i>Function 06h (Write Single Holding Register)</i> | 4 |
| | <i>Function 08h (Diagnostic with sub-function code 00h)</i> | 5 |
| | <i>Broadcast mode</i> | 5 |
| 1.3 | Application notes | 6 |
| | <i>RS485 general considerations</i> | 6 |
| | <i>MODBUS timing</i> | 6 |
| 2 | TABLES | 7 |
| 2.1 | Data format representation In Carlo Gavazzi instruments | 7 |
| | <i>Geometric representation</i> | 7 |
| 2.2 | Maximum and minimum electrical values in EM210..... | 7 |
| 2.3 | Instantaneous variables and meters (grouped by variable type) | 8 |
| 2.4 | Instantaneous variables and meters (grouped by phase)..... | 9 |
| 2.5 | Firmware version and revision code..... | 9 |
| 2.6 | Programming lock status..... | 9 |
| 2.7 | Carlo Gavazzi Controls identification code..... | 10 |
| 2.8 | Programming parameter tables..... | 10 |
| | <i>Password configuration menu</i> | 10 |
| | <i>System configuration menu</i> | 10 |
| | <i>PT and CT configuration menu</i> | 10 |
| | <i>Pulse output duration (T_{ON})</i> | 10 |
| | <i>Pulse output configuration menu</i> | 10 |
| | <i>Application menu</i> | 11 |
| | <i>Serial port configuration menu</i> | 11 |
| | <i>Reset commands</i> | 11 |
| | <i>Serial number</i> | 11 |
| | <i>Production year</i> | 12 |
| | <i>Secondary address</i> | 12 |
| 3 | REVISIONS | 13 |
| | <i>Modifications from Version 2 Revision 1.</i> | 13 |

1.1 Introduction

The RS485 serial interface supports the MODBUS/JBUS (RTU) protocol. In this document only the information necessary to read/write from/to EM210 has been reported (not all the parts of the protocol have been implemented).

For a complete description of the MODBUS protocol please refer to the "Modbus_Application_Protocol_V1_1a.pdf" document that is downloadable from the www.modbus.org web site.

1.2 MODBUS functions

These functions are available on EM210:

- Reading of n "Holding Registers" (code 03h)
- Reading of n "Input Register" (code 04h)
- Writing of one "Holding Registers" (code 06h)
- Diagnostic (code 08h with sub-function code 00h)
- Broadcast mode (writing instruction on address 00h)

IMPORTANT:

- 1) In this document the "Modbus address" field is indicated in two modes:
 - 1.1) "**Modicom address**": it is the "6-digit Modicom" representation with Modbus function code 04 (Read Input Registers). It is possible to read the same values with function code 03 (Read Holding Registers) replacing the first digit ("3") with the number "4".
 - 1.2) "**Physical address**": it is the "word address" value to be included in the communication frame.
- 2) The functions 03h and 04h have exactly the same effect and can be used indifferently.
- 3) The communication parameters are to be set according to the configuration of the instrument (refer to EM210 instruction manual)

Function 03h (Read Holding Registers)

This function is used to read the contents of a contiguous block of holding registers (word). The Request frame specifies the starting register address and the number of registers to be read. It is possible to read maximum 61 registers (words) with a single request, when not differently specified.

The register data in the response message are packed as two bytes per register (word), with the binary contents right justified within each byte. For each register, the first byte contains the high order bits (MSB) and the second contains the low order bits (LSB).

Request frame

| Description | Length | Value | Note |
|--------------------------------|---------|---------------------|----------------------|
| Physical address | 1 byte | 1 to F7h (1 to 247) | |
| Function code | 1 byte | 03h | |
| Starting address | 2 bytes | 0000h to FFFFh | Byte order: MSB, LSB |
| Quantity of registers (N word) | 2 bytes | 1 to 10h (1 to 11) | Byte order: MSB, LSB |
| CRC | 2 bytes | | |

Response frame (correct action)

| Description | Length | Value | Note |
|-----------------------------|-----------|---------------------|----------------------|
| Physical address | 1 byte | 1 to F7h (1 to 247) | |
| Function code | 1 byte | 03h | |
| Quantity of requested bytes | 1 byte | N word * 2 | |
| Register value | N*2 bytes | | Byte order: MSB, LSB |
| CRC | 2 bytes | | |

Response frame (incorrect action)

| Description | Length | Value | Note |
|------------------|---------|-------------------------------|--|
| Physical address | 1 byte | 1 to F7h (1 to 247) | Possible exception : 01h: illegal function 02h: illegal data address 03h: illegal data value 04h: slave device failure |
| Function code | 1 byte | 83h | |
| Exception code | 1 byte | 01h, 02h, 03h, 04h (see note) | |
| CRC | 2 bytes | | |

Function 04h (Read Input Registers)

This function code is used to read the contents of a contiguous block of input registers (word). The Request frame specifies the starting register address and the number of registers to be read. It is possible to read maximum 61 register (word) with a single request, when not differently specified.

The register data in the response message are packed as two bytes per register (word), with the binary contents right justified within each byte. For each register, the first byte contains the high order bits (MSB) and the second contains the low order bits (LSB).

Request frame

| Description | Length | Value | Note |
|--------------------------------|---------|---------------------|----------------------|
| Physical address | 1 byte | 1 to F7h (1 to 247) | |
| Function code | 1 byte | 04h | |
| Starting address | 2 bytes | 0000h to FFFFh | Byte order: MSB, LSB |
| Quantity of registers (N word) | 2 bytes | 1 to 10h (1 to 11) | Byte order: MSB, LSB |
| CRC | 2 bytes | | |

Response frame (correct action)

| Description | Length | Value | Note |
|-----------------------------|-----------|---------------------|----------------------|
| Physical address | 1 byte | 1 to F7h (1 to 247) | |
| Function code | 1 byte | 04h | |
| Quantity of requested bytes | 1 byte | N word * 2 | |
| Register value | N*2 bytes | | Byte order: MSB, LSB |
| CRC | 2 bytes | | |

Response frame (incorrect action)

| Description | Length | Value | Note |
|------------------|---------|---------------------|--|
| Physical address | 1 byte | 1 to F7h (1 to 247) | Possible exception : 01h: illegal function 02h: illegal data address 03h: illegal data value 04h: slave device failure |
| Function code | 1 byte | 84h | |
| Exception code | 1 byte | 01h, 02h, 03h, 04h | |
| CRC | 2 bytes | | |

Function 06h (Write Single Holding Register)

This function code is used to write a single holding register. The Request frame specifies the address of the register (word) to be written and its content.

The correct response is an echo of the request, returned after the register content has been written.

Request frame

| Description | Length | Value | Note |
|------------------|---------|---------------------|----------------------|
| Physical address | 1 byte | 1 to F7h (1 to 247) | |
| Function code | 1 byte | 06h | |
| Starting address | 2 bytes | 0000h to FFFFh | Byte order: MSB, LSB |
| Register value | 2 bytes | 0000h to FFFFh | Byte order: MSB, LSB |
| CRC | 2 bytes | | |

Response frame (correct action)

| Description | Length | Value | Note |
|------------------|---------|---------------------|----------------------|
| Physical address | 1 byte | 1 to F7h (1 to 247) | |
| Function code | 1 byte | 06h | |
| Starting address | 2 bytes | 0000h to FFFFh | Byte order: MSB, LSB |
| Register value | 2 bytes | 0000h to FFFFh | Byte order: MSB, LSB |
| CRC | 2 bytes | | |

Response frame (incorrect action)

| Description | Length | Value | Note |
|------------------|---------|---------------------|--|
| Physical address | 1 byte | 1 to F7h (1 to 247) | Possible exception : 01h: illegal function 02h: illegal data address 03h: illegal data value 04h: slave device failure |
| Function code | 1 byte | 86h | |
| Exception code | 1 byte | 01h, 02h, 03h, 04h | |
| CRC | 2 bytes | | |

Function 08h (Diagnostic with sub-function code 00h)

MODBUS function 08h provides a series of tests to check the communication system between a client (Master) device and a server (Slave), or to check various internal error conditions in a server.

EM210 supports only 0000h sub-function code (Return Query Data). With this sub-function the data passed in the request data field is to be returned (looped back) in the response. The entire response message should be identical to the request.

Request frame

| Description | Length | Value | Note |
|------------------|------------|---------------------|----------------------|
| Physical address | 1 byte | 1 to F7h (1 to 247) | |
| Function code | 1 byte | 08h | |
| Sub-function | 2 bytes | 0000h | |
| Data (N word) | N *2 bytes | Data | Byte order: MSB, LSB |
| CRC | 2 bytes | | |

Response frame (correct action)

| Description | Length | Value | Note |
|------------------|------------|--------------------|----------------------|
| Physical address | 1 byte | 1 to F7 (1 to 247) | |
| Function code | 1 byte | 08h | |
| Sub-function | 2 bytes | 0000h | |
| Data (N word) | N *2 bytes | Data | Byte order: MSB, LSB |
| CRC | 2 bytes | | |

Response frame (incorrect action)

| Description | Length | Value | Note |
|------------------|---------|---------------------|--|
| Physical address | 1 byte | 1 to F7h (1 to 247) | Possible exception : 01h: illegal function 02h: illegal data address 03h: illegal data value 04h: slave device failure |
| Function code | 1 byte | 88h | |
| Exception code | 1 byte | 01h, 02h, 03h, 04h | |
| CRC | 2 bytes | | |

Broadcast mode

In broadcast mode the master can send a request (command) to all the slaves. No response is returned to broadcast requests sent by the master. It is possible to send the broadcast message only with function code 06h using address 00h.

1.3 Application notes

RS485 general considerations

1. To avoid errors due to the signal reflections or line coupling, it is necessary to terminate the bus at the beginning and at the end (inserting a 120 ohm 1/2W 5% resistor between line B and A in the last instrument and in the Host interface).
2. The network termination is necessary even in case of point-to-point connection and/or of short distances.
3. For connections longer than 1000m or if in the network there are more than 160 instruments (with 1/5 unit load as used in EM210 interface), a signal repeater is necessary.
4. For bus connection it is suggested to use an AWG24 balanced pair cable and to add a third wire for GND connection. Connect GND to the shield if a shielded cable is used.
5. The GND is to be connected to ground only at the host side.
6. If an instrument does not answer within the "max answering time", it is necessary to repeat the query. If the instrument does not answer after 2 or 3 consecutive queries, it is to be considered as not connected, faulty or reached with a wrong address. The same consideration is valid in case of CRC errors or incomplete response frames.

MODBUS timing

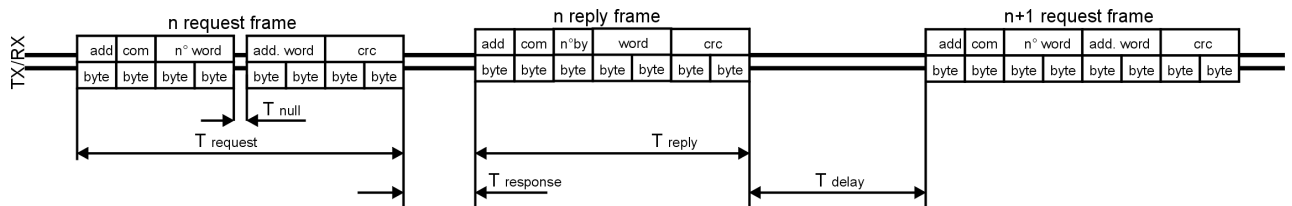


Fig. 1 : 2-wire timing diagram

| Timing characteristics of reading function: | msec |
|--|---------|
| T response: Max answering time | 500ms |
| T response: Typical answering time | 40ms |
| T delay: Minimum time before a new query | 3.5char |
| T null: Max interruption time during the request frame | 2.5char |

2 TABLES

2.1 Data format representation In Carlo Gavazzi instruments


The variables are represented by integers or floating numbers, with 2's complement notation in case of "signed" format, using the following:

| Format | IEC data type | Description | Bits | Range |
|------------|---------------|---------------------------------|------|--|
| INT16 | INT | Integer | 16 | -32768 .. 32767 |
| UINT16 | UINT | Unsigned integer | 16 | 0 .. 65535 |
| INT32 | DINT | Double integer | 32 | $-2^{31} .. 2^{31}$ |
| UINT32 | UDINT | Unsigned double int | 32 | $0 .. 2^{32}-1$ |
| UINT64 | ULINT | Unsigned long integer | 64 | $0 .. 2^{64}-1$ |
| IEEE754 SP | | Single-precision floating-point | 32 | $-(1+[1 -2^{-23}])\times 2^{127} .. 2^{128}$ |

For all the formats the byte order (inside the single word) is MSB->LSB. In INT32, UINT32 and UINT64 formats, the word order is LSW-> MSW.

Geometric representation

According to the signs of the power factor , the active power P and the reactive power Q, it is possible to obtain a geometric representation of the power vector, as indicated in the drawing below, according to EN 60253-23:

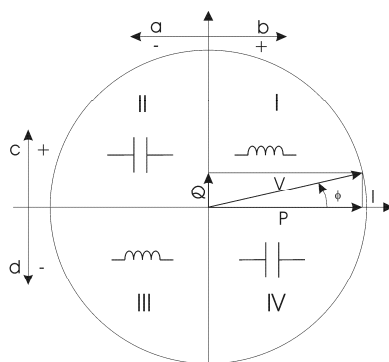

a = Exported active power
 b = Imported active power
 c = Imported reactive power
 d = Exported reactive power

Fig. 2 : Geometric Representation

2.2 Maximum and minimum electrical values in EM210

The maximum electrical input values are reported in electrical data sheet. The overflow indication "EEE" is displayed when the MSB value of the relevant variable is 7FFFh.

2.3 Instantaneous variables and meters (grouped by variable type)

MODBUS: read only mode with functions code 03 and 04

Table 2.3-1

| Modicom address | Physical address | Length (words) | VARIABLE ENG. UNIT | Data Format | Notes |
|-----------------|------------------|----------------|--------------------|-------------|---|
| 300001 | 0000h | 2 | V L1-N | INT32 | Value weight: Volt*10 |
| 300003 | 0002h | 2 | V L2-N | INT32 | |
| 300005 | 0004h | 2 | V L3-N | INT32 | |
| 300007 | 0006h | 2 | V L1-L2 | INT32 | |
| 300009 | 0008h | 2 | V L2-L3 | INT32 | |
| 300011 | 000Ah | 2 | V L3-L1 | INT32 | Value weight: Ampere*1000 |
| 300013 | 000Ch | 2 | A L1 | INT32 | |
| 300015 | 000Eh | 2 | A L2 | INT32 | |
| 300017 | 0010h | 2 | A L3 | INT32 | Value weight: Watt*10 |
| 300019 | 0012h | 2 | W L1 | INT32 | |
| 300021 | 0014h | 2 | W L2 | INT32 | |
| 300023 | 0016h | 2 | W L3 | INT32 | Value weight: VA*10 |
| 300025 | 0018h | 2 | VA L1 | INT32 | |
| 300027 | 001Ah | 2 | VA L2 | INT32 | |
| 300029 | 001Ch | 2 | VA L3 | INT32 | Value weight: Var*10 |
| 300031 | 001Eh | 2 | VAR L1 | INT32 | |
| 300033 | 0020h | 2 | VAR L2 | INT32 | |
| 300035 | 0022h | 2 | VAR L3 | INT32 | Value weight: Volt*10 |
| 300037 | 0024h | 2 | V L-N Σ | INT32 | |
| 300039 | 0026h | 2 | V L-L Σ | INT32 | |
| 300041 | 0028h | 2 | W Σ | INT32 | Value weight: Watt*10 |
| 300043 | 002Ah | 2 | VA Σ | INT32 | Value weight: VA*10 |
| 300045 | 002Ch | 2 | VAR Σ | INT32 | Value weight: Var*10 |
| 300047 | 002Eh | 1 | PF L1 | INT16 | Negative values correspond to exported active power, positive values correspond to imported active power Value weight: PF*1000 |
| 300048 | 002Fh | 1 | PF L2 | INT16 | |
| 300049 | 0030h | 1 | PF L3 | INT16 | |
| 300050 | 0031h | 1 | PF Σ | INT16 | |
| 300051 | 0032h | 1 | Phase sequence | INT16 | The value 1 corresponds to L1-L3-L2 sequence, the value 0 corresponds to L1-L2-L3 sequence. The phase sequence value is meaningful only in a 3-phase system |
| 300052 | 0033h | 1 | Hz | INT16 | Value weight: Hz |
| 300053 | 0034h | 2 | kWh(+) TOT | INT32 | Value weight: kWh*10 |
| 300055 | 0036h | 2 | kvarh(+) TOT | INT32 | Value weight: kvarh*10 |
| 300079 | 004Eh | 2 | kWh(-) TOT | | Value weight: kWh*10 |

Note.

The product (CT ratio)x(VT ratio) shall be automatically limited to prevent overflow of kW indication on the meter.

The product (CT ratio)x(VT ratio) shall be automatically limited in MID versions to prevent the rollover of the kWh meter before 4000 h, as stated in MID regulation.

2.4 Instantaneous variables and meters (grouped by phase)

MODBUS: read only mode with functions code 03 and 04

Table 2.4-1

| Modicom address | Physical address | Length (words) | VARIABLE ENG. UNIT | Data Format | Notes |
|--------------------------|------------------|----------------|--------------------|-------------|--|
| System variables | | | | | |
| 300257 | 0100h | 2 | n.a. | INT32 | Not available, value =0 |
| 300259 | 0102h | 2 | V L-N Σ | INT32 | Value weight: Volt*10 |
| 300261 | 0104h | 2 | V L-L Σ | INT32 | Value weight: Volt*10 |
| 300263 | 0106h | 2 | W Σ | INT32 | Value weight: Watt*10 |
| 300265 | 0108h | 2 | VA Σ | INT32 | Value weight: VA*10 |
| 300267 | 010Ah | 2 | VAR Σ | INT32 | Value weight: var*10 |
| 300269 | 010Ch | 2 | PF Σ | INT32 | (*) Value weight: PF*1000 |
| 300271 | 010Eh | 2 | Phase sequence | INT32 | The value -1 corresponds to L1-L3-L2 sequence, the value 0 corresponds to L1-L2-L3 sequence. The phase sequence value is meaningful only in a 3-phase system |
| 300273 | 0110h | 2 | Hz | INT32 | Value weight: Hz*10 |
| Total energies | | | | | |
| 300275 | 0112h | 2 | kWh(+) TOT | INT32 | Value weight: kWh*10 |
| 300277 | 0114h | 2 | kVarh(+) TOT | INT32 | Value weight: kvarh*10 |
| 300279 | 0116h | 2 | kWh(-) TOT | INT32 | Value weight: kWh*10 |
| Phase 1 variables | | | | | |
| 300287 | 011Eh | 2 | V L1-L2 | INT32 | Value weight: Volt*10 |
| 300289 | 0120h | 2 | V L1-N | INT32 | Value weight: Volt*10 |
| 300291 | 0122h | 2 | A L1 | INT32 | Value weight: Ampere*1000 |
| 300293 | 0124h | 2 | W L1 | INT32 | Value weight: Watt*10 |
| 300295 | 0126h | 2 | VA L1 | INT32 | Value weight: VA*10 |
| 300297 | 0128h | 2 | VAR L1 | INT32 | Value weight: var*10 |
| 300299 | 012Ah | 2 | PF L1 | INT32 | (*) Value weight: PF*1000 |
| Phase 2 variables | | | | | |
| 300301 | 012Ch | 2 | V L2-L3 | INT32 | Value weight: Volt*10 |
| 300303 | 012Eh | 2 | V L2-N | INT32 | Value weight: Volt*10 |
| 300305 | 0130h | 2 | A L2 | INT32 | Value weight: Ampere*1000 |
| 300307 | 0132h | 2 | W L2 | INT32 | Value weight: Watt*10 |
| 300309 | 0134h | 2 | VA L2 | INT32 | Value weight: VA*10 |
| 300311 | 0136h | 2 | VAR L2 | INT32 | Value weight: var*10 |
| 300313 | 0138h | 2 | PF L2 | INT32 | (*) Value weight: PF*1000 |
| Phase 3 variables | | | | | |
| 300315 | 013Ah | 2 | V L3-L1 | INT32 | Value weight: Volt*10 |
| 300317 | 013Ch | 2 | V L3-N | INT32 | Value weight: Volt*10 |
| 300319 | 013Eh | 2 | A L3 | INT32 | Value weight: Ampere*1000 |
| 300321 | 0140h | 2 | W L3 | INT32 | Value weight: Watt*10 |
| 300323 | 0142h | 2 | VA L3 | INT32 | Value weight: VA*10 |
| 300325 | 0144h | 2 | VAR L3 | INT32 | Value weight: var*10 |
| 300327 | 0146h | 2 | PF L3 | INT32 | (*) Value weight: PF*1000 |

Note.

Negative values correspond to exported active power, positive values correspond to imported active power.

If Measuring system parameter is configured for 1-phase or 2-phase systems, the values relevant to phase 2 and 3 can still be read with a valid value, equal to 0.

2.5 Firmware version and revision code

MODBUS: read only mode with functions code 03 and 04 limited to a word at a time

Table 2.5-1

| Modicom address | Physical address | Length (words) | VARIABLE ENG. UNIT | Data Format | Notes |
|-----------------|------------------|----------------|--------------------|-------------|---------------------|
| 300771 | 0302h | 1 | Version code | UINT 16 | Value=0: Version A |
| 300772 | 0303h | 1 | Revision code | UINT 16 | Value=1: Revision 1 |

2.6 Programming lock status

MODBUS: read only mode with functions code 03 and 04 limited to a word at a time

Table 2.6-1

| Modicom address | Physical address | Length (words) | VARIABLE ENG. UNIT | Data Format | Notes |
|-----------------|------------------|----------------|--|-------------|--|
| 300773 | 0304h | 1 | Programming lock (trimmer position in the rear of the display) | UINT 16 | Value=1: programming locked Value=0: programming unlocked |



2.7 Carlo Gavazzi Controls identification code

MODBUS: read only mode with functions code 03 and 04 limited to a word at a time

Table 2.7-1

| Modicom address | Physical address | Length (words) | VARIABLE ENG. UNIT | Data Format | Notes |
|-----------------|------------------|----------------|--|-------------|------------------|
| 300012 | 000Bh | 1 | Carlo Gavazzi Controls identification code | UINT 16 | Value=210: EM210 |

2.8 Programming parameter tables

The values are update immediately

Password configuration menu

MODBUS: read and write mode

Table 2.8-1

| Modicom address | Physical address | Length (words) | VARIABLE ENG. UNIT | Data Format | Notes |
|-----------------|------------------|----------------|--------------------|-------------|---|
| 304097 | 1000h | 1 | PASSWORD | UINT 16 | Minimum valid value: 0d Maximum valid value: 999d Default: 0d |

System configuration menu

MODBUS: read and write mode

Table 2.8-2

| Modicom address | Physical address | Length (words) | VARIABLE ENG. UNIT | Data Format | Notes |
|-----------------|------------------|----------------|--------------------|-------------|---|
| 304099 | 1002h | 1 | Measuring system | UINT 16 | Value=0: 3Pn Value=1: 3P Value=2: 2P Value=3: 1P Value=4: 3P1 Default: 3Pn |

Note. PFA and PFB models support only 3Pn system

PT and CT configuration menu

MODBUS: read and write mode

Table 2.8-3

| Modicom address | Physical address | Length (words) | VARIABLE ENG. UNIT | Data Format | Notes |
|-----------------|------------------|----------------|---------------------------|-------------|---|
| 304100 | 1003h | 2 | Current transformer ratio | UINT 32 | Value min = 10 (CT=1.0) Value max = 9990 (CT=999.0) Default = 10 (CT=1.0) |
| 304102 | 1005h | 2 | Voltage transformer ratio | UINT 32 | Value min = 10 (VT=1.0) Value max = 9990 (VT=999.0) Default = 10 (VT=1.0) |

Note. The voltage transformer ratio in AV5 PFA and PFB models is fixed to 1.0.

Pulse output duration (T_{ON})

MODBUS: read and write mode

Table 2.8-4

| Modicom address | Physical address | Length (words) | VARIABLE ENG. UNIT | Data Format | Notes |
|-----------------|------------------|----------------|--|-------------|--|
| 304129 | 1012h | 1 | Pulse output duration (T _{ON}) | UINT 16 | Value=0: 30ms Value=1: 100ms Default=0: 30ms |

Pulse output configuration menu

MODBUS: read and write mode

Table 2.8-5

| Modicom address | Physical address | Length (words) | VARIABLE ENG. UNIT | Data Format | Notes |
|-----------------|------------------|----------------|--------------------|-------------|---|
| 304866 | 1020h | 1 | kWh per pulse | UINT 16 | Value min = 1 (0.01kWh) Value max = 999 (9.99kWh) Default = 1 (0.01kWh) |

Application menu

MODBUS: read and write mode

Table 2.8-6

| Modicom address | Physical address | Length (words) | VARIABLE ENG. UNIT | Data Format | Notes |
|-----------------|------------------|----------------|---------------------|-------------|--|
| 304865 | 1300h | 1 | Type of application | UINT 16 | Value=0: A application Value=1: B application Value=2: C application (default model X and PFA) Value=3: D application (default model PFB) Value=4: E Value=5: F |

Note.

PFA models support applications "A", "B" and "C" only.
PFB models support application "D" only.
All applications are available in X models.

Serial port configuration menu

MODBUS: read and write mode

Table 2.8-7

| Modicom address | Physical address | Length (words) | VARIABLE ENG. UNIT | Data Format | Notes |
|-----------------|------------------|----------------|--------------------------|-------------|---|
| 308193 | 2000h | 1 | RS485 instrument address | UINT 16 | Value min = 1 Value max = 247 |
| 308194 | 2001h | 1 | RS485 baud rate | UINT 16 | Value 0 = 9.6 kbps (default) Value 1 = 19.2 kbps Value 2 = 38.4 kbps Value 3 = 57.6 kbps Value 4 = 115.2 kbps Any other value = 9.6 kbps |
| 308195 | 2002h | 1 | RS485 parity | UINT 16 | Value 0 = no parity (default) Value 1 = even parity Any other value = no parity |
| 308196 | 2003h | 1 | RS485 Stop bit | UINT 16 | Value 0 = 1 stop bit (default) Value 1 = 2 stop bit Any other value = 1 stop bit |

Note. The values are update in real time.

Reset commands

MODBUS: write only mode

Table 2.8-8

| Modicom address | Physical address | Length (words) | VARIABLE ENG. UNIT | Data Format | Notes |
|-----------------|------------------|----------------|---|-------------|---|
| 316385 | 4000h | 1 | Reset of all meters (kWhTOT and kvarhTOT) | UINT 16 | Value=1: Command is executed All other values produce no effects |

Serial number

MODBUS: read only mode

Table 2.8-9

| Modicom address | Physical address | Length (words) | VARIABLE ENG. UNIT | Data Format | Notes |
|-----------------|------------------|----------------|--|-------------|------------------------------------|
| 320481 | 5000h | 1 | Letter 1 (from SX) Letter 2 (from SX) | UINT 16 | MSB: ASCII code LSB: ASCII code |
| 320482 | 5001h | 1 | Letter 3 (from SX) Letter 4 (from SX) | UINT 16 | MSB: ASCII code LSB: ASCII code |
| 320483 | 5002h | 1 | Letter 5 (from SX) Letter 6 (from SX) | UINT 16 | MSB: ASCII code LSB: ASCII code |
| 320484 | 5003h | 1 | Letter 7 (from SX) Letter 8 (from SX) | UINT 16 | MSB: ASCII code LSB: ASCII code |
| 320485 | 5004h | 1 | Letter 9 (from SX) Letter 10 (from SX) | UINT 16 | MSB: ASCII code LSB: ASCII code |
| 320486 | 5005h | 1 | Letter 11 (from SX) Letter 12 (from SX) | UINT 16 | MSB: ASCII code LSB: ASCII code |
| 320487 | 5006h | 1 | Letter 13 (from SX) | UINT 16 | MSB: ASCII code |

Production year

MODBUS: read only mode

Table 2.8-10

| Modicom address | Physical address | Length (words) | VARIABLE ENG. UNIT | Data Format | Notes |
|-----------------|------------------|----------------|----------------------------|-------------|-------|
| 320488 | 5007h | 1 | Instrument production year | UINT 16 | |

Secondary address

MODBUS: read only mode

Table 2.8-11

| Modicom address | Physical address | Length (words) | VARIABLE ENG. UNIT | Data Format | Notes |
|-----------------|------------------|----------------|------------------------------|-------------|------------------------|
| 320737 | 5100h | 2 | Instrument secondary address | UINT 16 | 5100h:LSW 5101h:MSW |

Note.

A default value is automatically assigned to the parameters when an out-of-range or invalid value is written.
The default value is the minimum valid value.

3 Revisions

Modifications from Version 2 Revision 1.

Changed paragraph "Maximum and minimum electrical values in EM210".